FAIRCHILD
INSTRUMENTATION

instruction manual for 7050 digital multimeter

PRICE—TWO DOLLARS FIFTY CENTS

CONTENTS

Page

GENERAL INFORMATION **1**
- Introduction 1
- Accessories Available 1
- Specifications 2

INSTALLATION **5**
- Introduction 5
- Unpacking and Inspection 5
- Power Requirements 5
- Operation Check 7
- Rack Mount Option 7
- Carrying Handle/Tilt Stand Option 7
- Reshipment 7

OPERATION **12**
- Introduction 12
- Controls 12
- DC Voltage Measurement 12
- Resistance Measurement 12

Page

OPERATION (Cont.)
- DC Current Measurement (Optional) ... 12
- Holding a Measurement 12

THEORY OF OPERATION **17**
- Introduction 17
- Operating Principles 17
- Detailed Circuit Description 20

MAINTENANCE **33**
- Introduction 33
- Test Equipment Required 33
- Performance Check 34
- Calibration Procedure 36
- Parts Location and Schematic 36

REPLACEMENT PARTS **40**
- General 40
- Ordering Information 40
- Abbreviations 40

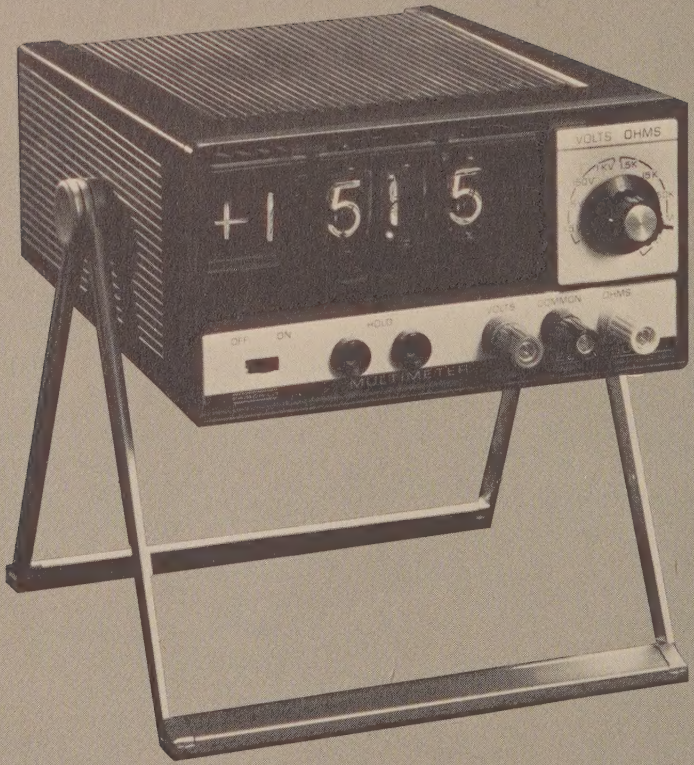

Figure 1. Model 7050 Digital Multimeter with Optional Tilt Stand

GENERAL INFORMATION

INTRODUCTION

The Model 7050 Digital Multimeter is a low cost accurate 3-digit instrument suitable for use in production, general test, servicing, and educational applications. It is also widely used as a replacement for analog-type meters and panel indicators. The instrument will measure DC voltage from 0.000 to 1000 volts with 0.1% accuracy. Full scale ranges are 1.500 V, 15.00 V, 150.0 V and 1000 V. The input can be floated 500 V above ground. The input impedance is greater than 1 kMΩ on the 1.500 V range and 10 MΩ on the other 3 DC ranges.

The Model 7050 will measure resistance from 0.000 to 15.00 MΩ in five full scale ranges of 1.500 kΩ, 15.00 kΩ, 150.0 kΩ, 1.500 MΩ, and 15.00 MΩ. The voltage and resistance ranges are selected by a single front panel control.

The measuring technique utilized in the Model 7050 is dual-slope integration. This technique combines the noise rejection capabilities of integration with the accuracy and stability of automatic comparison to an internal standard. The input amplifier in the instrument is chopper-stabilized with a MOS FET and provides high stability and low drift characteristics.

The instrument performs six measurement samples per second, ensuring a fast measurement response time in the event of a change in source voltage or resistance. Also, an "infinite hold" capability is provided that allows the operator to take-and-hold a reading. This is accomplished by connecting a short between two HOLD terminals on the front panel. The use of Fairchild micrologic elements in the instrument ensures precision operation and high reliability as well as a high speed readout response.

The Model 7050 is designed to operate from a 115 V 50 Hz, 60 Hz or 400 Hz power source. Other versions of the instrument are available for operation from 100 V AC, 220 V AC, and 230 V AC power. These may be ordered as Model 7050-100, Model 7050-220, and Model 7050-230 respectively. The power transformer wiring on all three of these models is capable of being changed to allow each instrument to operate from 100 V AC, 220 V AC or 230 V AC. Changeover from one input level to another is effected by a simple rearrangement of the leads on the primary of the power transformer and a change in the value of the input fuse. Complete details of the changeover are shown in figure 3.

ACCESSORIES AVAILABLE

Optional equipment available for use with all Models of the 7050 is listed below:

a. Precision Current Shunts: Used with Model 7050

to perform DC current measurements. Shunts for measuring five full scale ranges from 150.0 μA to 1.500 A are available. See below. The five shunts can be ordered as a kit. FI part #93000259.

b. Carrying Handle : Converts to a self-locking tilt stand. Provides convenient portage and adjustable positioning features. FI part #93000258.

c. Rack Mounting Kit : Adapts instrument to a standard rack mounting configuration, 3½" high and 19" wide. Provides capability of mounting 2 Model 7050's side-by-side. FI part #95000000.

SPECIFICATIONS

Specifications for the Model 7050 Digital Multimeter are as follows :

DC Volts

Ranges : 4 ranges, manually selected
±1.500 V full scale
±15.00 V full scale
±150.0 V full scale
±1000 V full scale

Accuracy : 15°C to 35°C ±0.1% of reading, ±1 digit

Accuracy : 0° to 45°C ±0.3% of reading, ±2 digits

DC Volts (continued)

Voltage Coefficient : Above 500 V : 0.0005% per volt

Resolution : 1 mV on 1.500 V range

Response Time : <5 sec

Input Z :

1.500 V	>1 kMΩ
15.00 V	10 MΩ
150.0 V	10 MΩ
1000 V	10 MΩ

Overload Protection : 1000 V maximum on any range with no damage.

DC Current (Option)

Measurement : A precision shunt resistance is connected across VOLTS–COMMON terminals. Current under test is directed through shunt and resulting voltage drop is measured by the Model 7050 operating on its 1.5 V range.

Ranges :

Full Scale Current	Shunt Value	Fairchild Stock No.
150.0 μA	10 kΩ ±0.1%	09045091
1.500 mA	1 kΩ ±0.1%	09045101
15.00 mA	100 Ω ±0.1%	09045111
150.0 mA	10 Ω ±0.1%	09045121
1.500 A	1 Ω ±0.3%	09045131

DC Current (continued)

Resolution :	0.1 μA with 10 kΩ shunt
Accuracy : 15°C to 35°C	1.500 A range : ±0.4% of reading, ±1 digit
	All other ranges : ±0.2% of reading, ±1 digit
Accuracy : 0°C to 35°C	1.500 A range : ±0.6% of reading, ±2 digits
	All other ranges : ±0.4% of reading, ±2 digits

Ohms

Ranges :	5 ranges, manually selected 1.500 kΩ full scale 15.00 kΩ full scale 150.0 kΩ full scale 1.500 MΩ full scale 15.00 MΩ full scale
Accuracy : 15°C to 35°C	1.500 kΩ ±0.2% of reading, ±1 digit 15.00 kΩ ±0.2% of reading, ±1 digit 150.0 kΩ ±0.2% of reading, ±1 digit 1.500 MΩ ±1% of reading, ±1 digit 15.00 MΩ ±1% of reading, ±1 digit
Accuracy : 0°C to 45°C	1.500 kΩ ±0.3% of reading, ±2 digits 15.00 kΩ ±0.3% of reading, ±2 digits 150.0 kΩ ±0.3% of reading, ±2 digits 1.500 MΩ ±3.0% of reading, ±2 digits 15.00 MΩ ±3.0% of reading, ±2 digits

Readout

Three digital readout indicators; one over-range digit; three decimal point indicators; plus (+) and minus (-) polarity indicators; display storage (non-blinking).

Power Requirements

7050	115 V AC ±10%, 50 Hz, 60 Hz or 400 Hz, approximately 7 W
7050-100	100 V AC ±10%, 50 Hz, 60 Hz or 400 Hz, approximately 7 W
7050-220	220 V AC ±10%, 50 Hz, 60 Hz or 400 Hz, approximately 7 W
7050-230	230 V AC ±10% 50 Hz, 60 Hz or 400 Hz, approximately 7 W

Dimensions:

See outline drawing, figure 2.

Weight:

Less than 4 lbs. (1.9 kg).

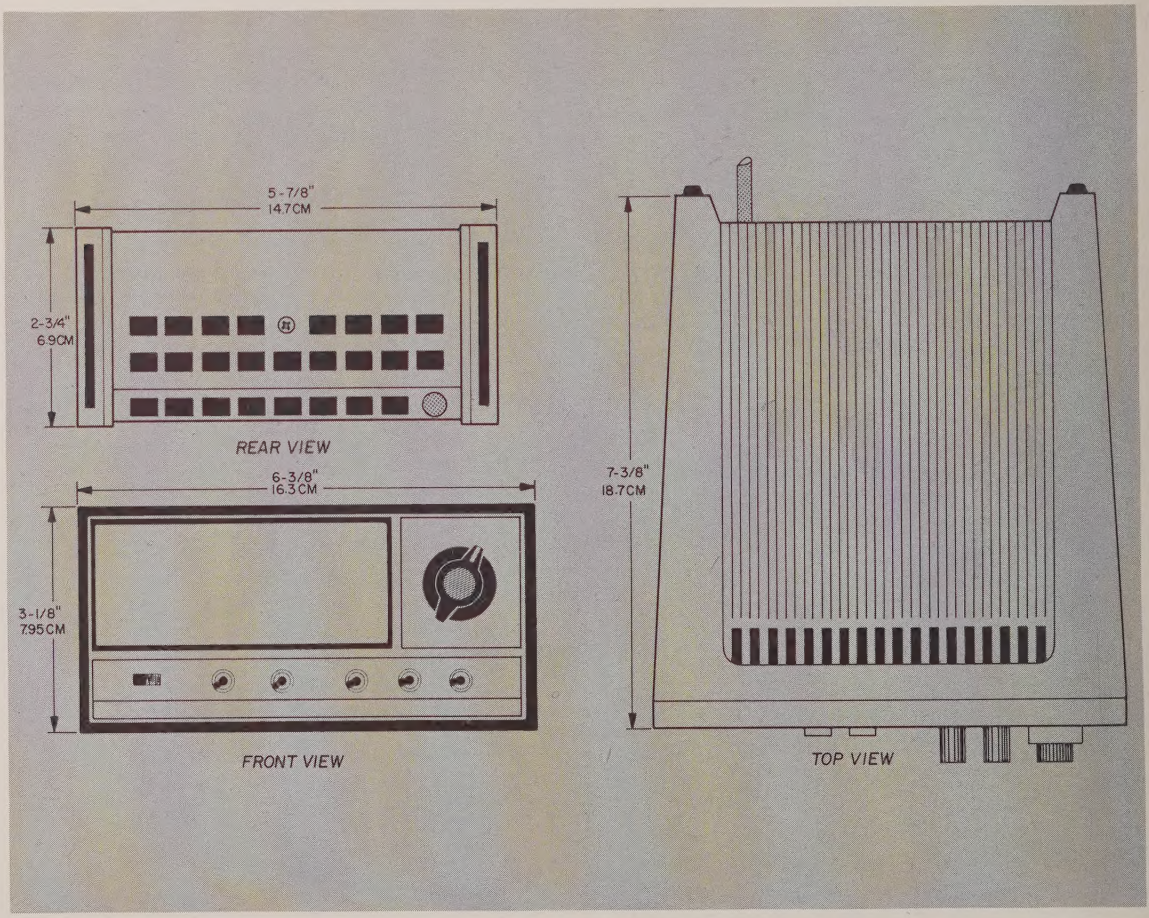

Figure 2. Model 7050 Outline Drawing

INSTALLATION

INTRODUCTION

This section outlines procedures for inspection and initial installation. Reshipment instructions are included in case the instrument must be returned to Fairchild Instrumentation.

UNPACKING AND INSPECTION

Before accepting the instrument from the shipper, inspect the crated instrument for external damage. Any sign of external damage must be noted by both customer and shipper, and should be called to the attention of the insurance investigator.

As soon as the equipment is unpacked, inspect the instrument for damage in shipment. Check for scratches or dents and damaged knobs or connectors. If damage is noted, do not use the instrument unless instructed by the insuring agency.

POWER REQUIREMENTS

Power Plug

The Model 7050 is equipped with a three conductor power cable that grounds the instrument when the connector is plugged into a matching receptacle. To preserve this safety feature when operating with a two-contact outlet, use an adapter and connect the pigtail on the adapter to a suitable ground.

Model 7050

The Model 7050 is designed to operate from a 115 V ±10%, 50 Hz, 60 Hz or 400 Hz power source. It draws approximately 7 watts. Do not connect the instrument to a power source with incorrect voltage or inadequate current rating.

Models 7050-100, 7050-220, and 7050-230

These models are designed to operate from 100 V AC 220 V AC and 230 V AC ±10% respectively. Frequency requirements and power consumption are similar to the Model 7050. A tag on the instrument power cord identifies the correct input power level.

Input Power Changeover

The wiring to the power transformer fitted in Models 7050-100, 7050-220, and 7050-230 is capable of being altered to permit each of these instruments to operate from any one of the three specified AC power levels. To effect this changeover,follow instructions given in figure 3.

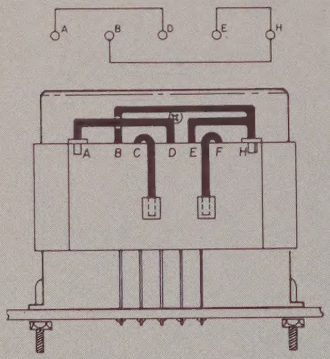

100 V AC Operation

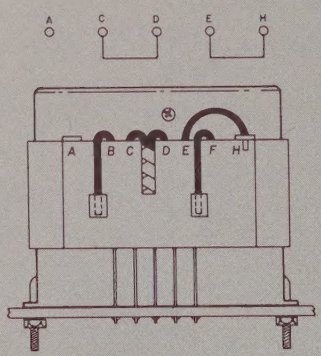

220 V AC Operation

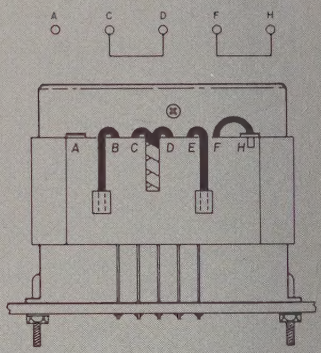

230 V AC Operation

a) Disconnect instrument from AC power source.

b) Remove retaining screw from rear of instrument and slide case away from chassis. See figure 4, step a.

c) Consult diagrams above. Change wiring on top of transformer T1 for desired AC input power level. Symbols used in the sketches are defined below:

= an unused wire. Turn bare lead back and insulate.

= twist bare leads together, solder and insulate.

= solder wire to terminal.

Correct Value for Fuse F1:

100 V AC – 1/10 A
(FI #11007130)

220 V AC – 1/16 A
230 V AC – 1/16 A
(FI #11007400)

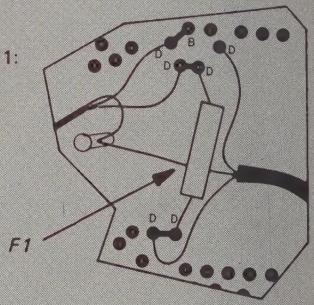

d) Check that value of fuse F1 mounted on bottom of printed circuit board is correct. Replace if necessary.

e) Change marking on power cord label to indicate new input power requirement. Insert meter in case and replace retaining screw.

Figure 3. Input Power Changeover Instructions for Models 7050-100, 7050-220, and 7050-230

OPERATION CHECK

The following preliminary operation check may be used to ensure that all components and circuits are in proper operating condition when the instrument is first energized. The procedure provides a quick check for proper functioning, but does not check specifications completely. Refer to the maintenance section of this manual for a complete performance check.

NOTE

The Model 7050 has a very low internal noise current on the order of 0.2 nA. When the voltage input terminals are open circuited with the range switch on the 15 V, 150 V or 1000 V position, (10 MΩ input Z), the reading always will drop to 000. When in the 1.5 V position (>1000 MΩ input Z), the low noise current is accumulated as a voltage across the high input impedance and appears as a slowly increasing numerical value on the readout. In any of the OHMS ranges, with the input open, the Model 7050 will read over full scale (1500) since the resistance between terminals is that of the air gap itself.

a. Connect instrument to AC power source.

b. Set power ON/OFF switch to ON position. Display panel should light up.

c. Set Function/Range switch to VOLTS/1.5 V and connect short between VOLTS and COMMON terminals. Check that readout is between .000 and ±.001.

d. Set Function/Range switch to OHMS/1.5 K. Move short to OHMS–COMMON terminals. Check that readout is between .000 and ±.001.

e. Remove short and set power ON/OFF switch to OFF. Disconnect instrument from AC power source.

RACK MOUNT OPTION

Instructions for installing the optional rack mounting accessory (Fairchild stock number 95000000) are detailed in figure 4.

CARRYING HANDLE/TILT STAND OPTION

Instructions for installing and using the optional carrying handle/tilt stand (Fairchild stock number 93000258) are given in figure 5. Before attempting assembly of the kit, determine that all items are included. See page 51.

RESHIPMENT

When a damaged instrument is to be returned for service or repair, contact your nearest Fairchild Instrumentation engineering representative for shipping instructions. Such an instrument should be properly identified and tagged to facilitate handling and identification upon receipt at the repair center or factory.

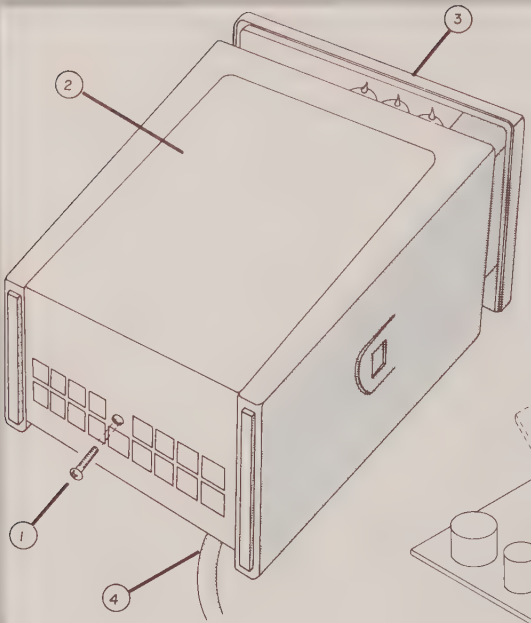

a) Remove screw (1) and slide case (2) away from chassis (3). It is not necessary to remove power cord (4).

b) Tilt chassis (1) forward approximately 60 degrees. Push front panel (2) through hole in rack mount assembly (3).

c) Return chassis (4) to horizontal position and move it back until rim on front panel seats into position on rack mount.

d) Replace case, pushing it against rack mount. Replace screw removed in step (a).

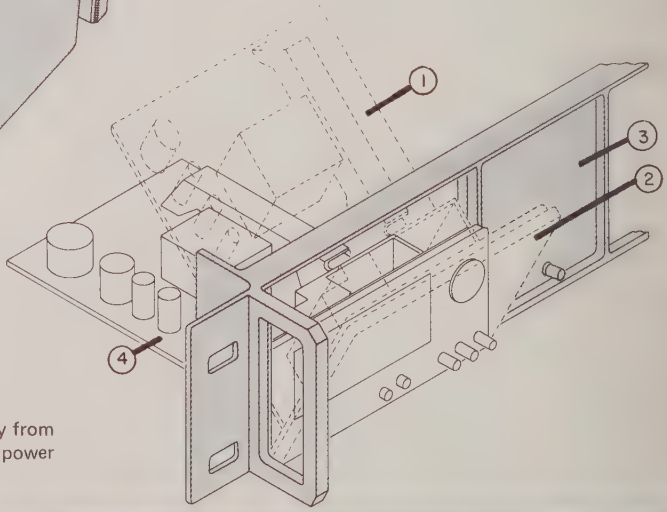

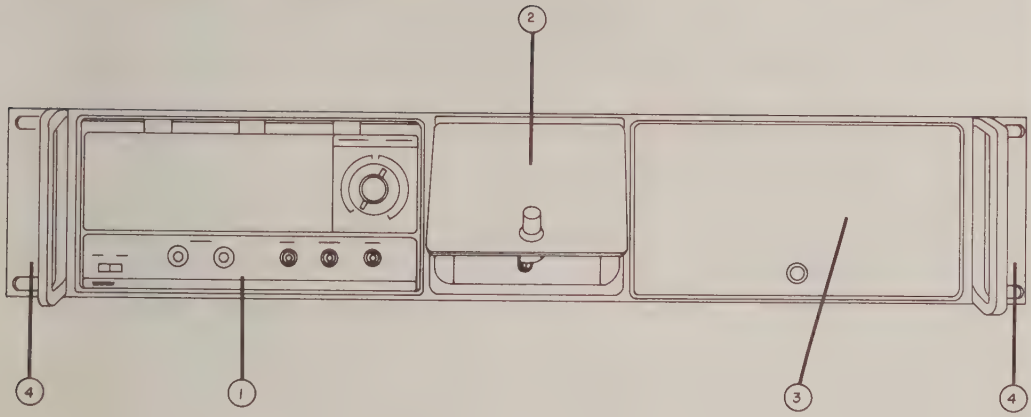

e) Figure above shows Model 7050 (1) properly mounted in rack mount assembly. Storage compartment (2) provides room to store special test probes, shunts, etc. Compartment (3) permits mounting a second 7050 on the rack assembly (4).

Figure 4. Rack Mount Installation Instructions

a) Remove retaining screw from rear of instrument and slide case away from chassis (3). It is not necessary to remove power cord. See figure 4, step a).

b) Assemble legs as shown at right. Note that each leg assembly consists of an inner leg (1), an outer leg (2), and a base support (3).

c) Place leg assemblies on a flat surface and offset slightly as shown.

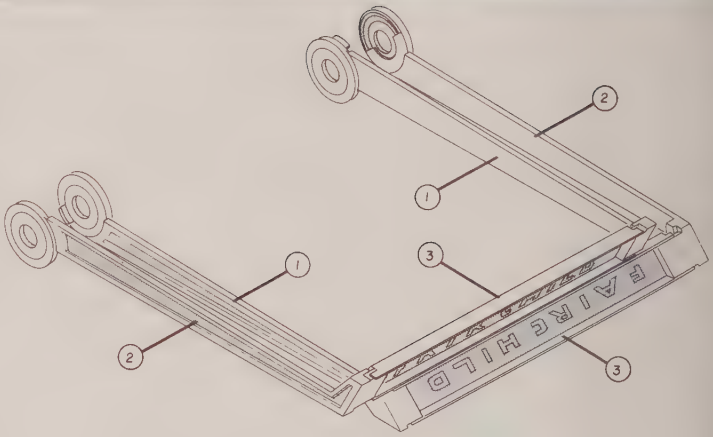

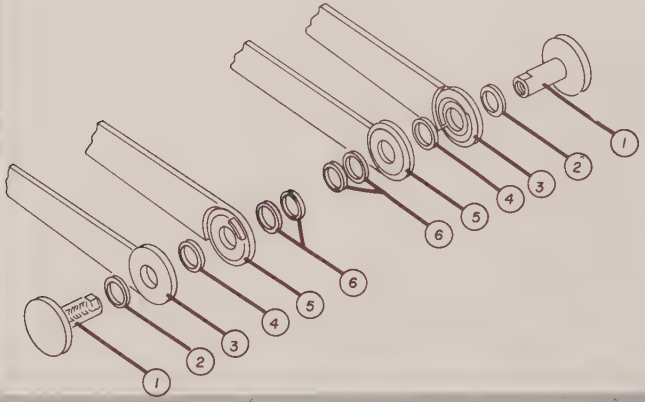

d) Connect leg assemblies together using retainers and plastic washers. Order of assembly is retainer (1), plastic washer (2), outer leg (3), plastic washer (4), inner leg (5), and plastic washers (6).

e) Slide case between legs approaching from rear of case, so that square holes in case align with ends of leg assemblies.

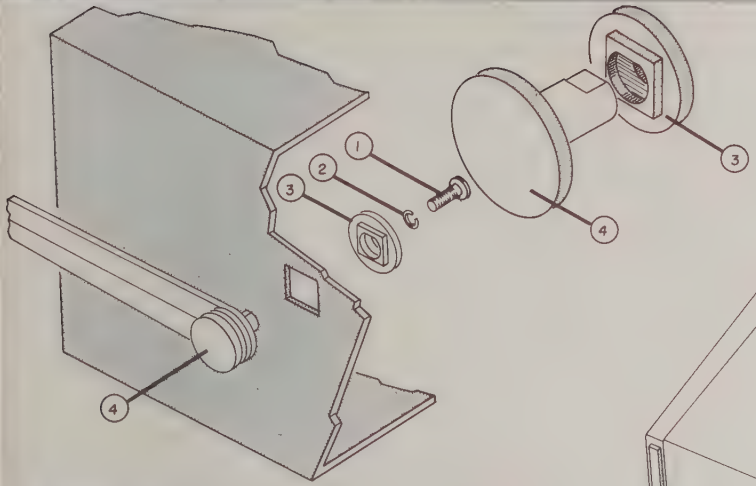

f) Assemble screw (1), lock washer (2) and bushing (3). Reach inside case and place bushing (3) in square hole in case.

g) Hold bushing (3) in place. Push and turn retainer (4) until "D" on shaft of retainer fits into position inside of bushing (3). Proper retainer (4)—bushing (3) orientation is shown in the blown-up view.

h) Tighten screw (1) from inside case, using a Phillips screwdriver with a 2-inch shaft.

i) Secure legs on opposite end of leg assembly to case, following same procedure.

j) Replace case and tighten screw (1). Check that stand works properly. When legs (2) are together, instrument should pivot freely. When legs are extended, movement should be impeded.

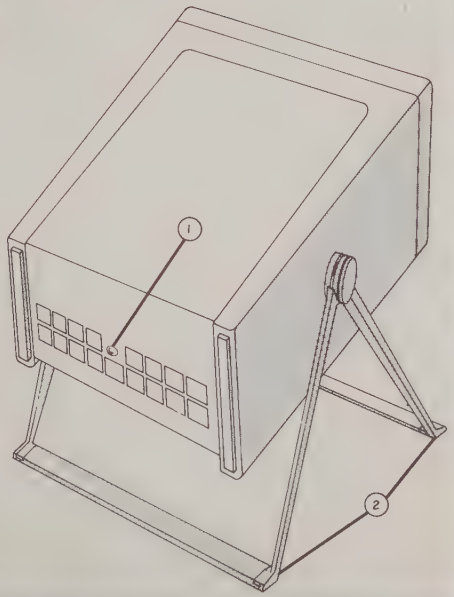

Figure 5. Carrying Handle/Tilt Stand Installation Instructions

OPERATION

INTRODUCTION

This section describes the controls and connectors on the Model 7050 and provides instructions for operating the instrument.

CONTROLS

Figure 6 describes the controls on the front panel of the instrument.

DC VOLTAGE MEASUREMENT

The Model 7050 will measure DC voltages from 0.000 to 1000 volts. Instructions for using the meter as a DC voltmeter are given in figure 7.

RESISTANCE MEASUREMENT

The Model 7050 will measure resistance from 0.000 to 15.000 MΩ. Instructions for using the Model 7050 as an ohmmeter are given in figure 8.

DC CURRENT MEASUREMENT (OPTIONAL)

Five precision current shunts are available for use with the Model 7050 in performing measurement of DC current ranging from 0.1 μA to 1.500 A. Instructions for using the instrument as a current meter are given in figure 9.

HOLDING A MEASUREMENT

To take-and-hold a measurement, simply insert a shorting link between the two terminals labelled HOLD. The reading indicated on the Model 7050 will be held until the short is removed.

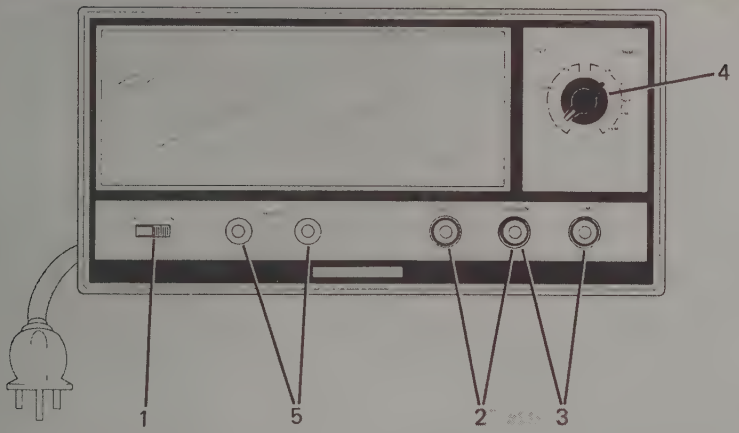

1. Power ON/OFF switch applies primary power to instrument. ON position is to right.
2. VOLTS terminal (left) and COMMON terminal (center) are input terminals for DC voltage measurements.
3. OHMS terminal (right) and COMMON terminal (center) are input terminals for resistance measurements.
4. Function/Range switch:
   a. Permits measurement of DC volts when switched to VOLTS ranges.
   b. Permits measurement of resistance when switched to OHMS ranges.
5. HOLD terminals allow operator to take-and-hold a single reading when short is connected between HOLD terminals.
6. Readout Panel gives visual presentation of three digits of data plus one overrange digit and decimal point. The most significant digit will indicate 1 or nothing. Function and Range are determined from Function/Range switch setting.

Figure 6. Front Panel Description

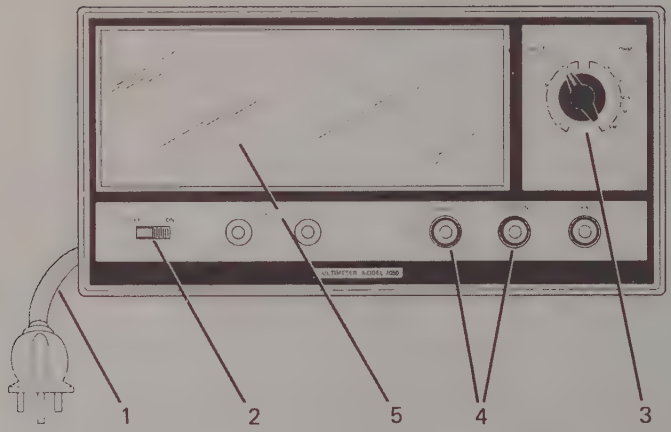

1. Connect power cord to AC power outlet.
2. Set ON/OFF switch to ON.
3. Set Function/Range switch to VOLTS/1 KV.
4. Connect unknown DC voltage across VOLTS and COMMON terminals.

NOTE

The Model 7050 has a very low internal noise current (in the order of 0.2 nA). When the voltage input terminals are open circuited with the Function/Range switch on the 15 V, 150 V or 1000 V positions (10 MΩ input Z), the reading drops to 000. When in the 1.5 V position (>1000 MΩ input Z) the low noise current is accumulated as a voltage across the high input impedance and appears as a slowly increasing numeric value on readout indicators.

5. Observe reading; if readout exceeds 1000 an overload condition exists. Remove input voltage immediately! Otherwise, reduce Function/Range switch VOLTS setting until proper range is reached. Table below indicates proper readout limits for each setting.

Function/Range Setting	Proper Readout Limits
VOLTS/1.5 V	.000 - 1.500
VOLTS/15 V	1.50 - 15.00
VOLTS/150 V	15.0 - 150.0
VOLTS/1 KV	150 - 1000

CAUTION

DO NOT FLOAT THE METER MORE THAN 500 V ABOVE GROUND OR DAMAGE TO THE INSTRUMENT WILL RESULT.

Figure 7. DC Voltage Measurement

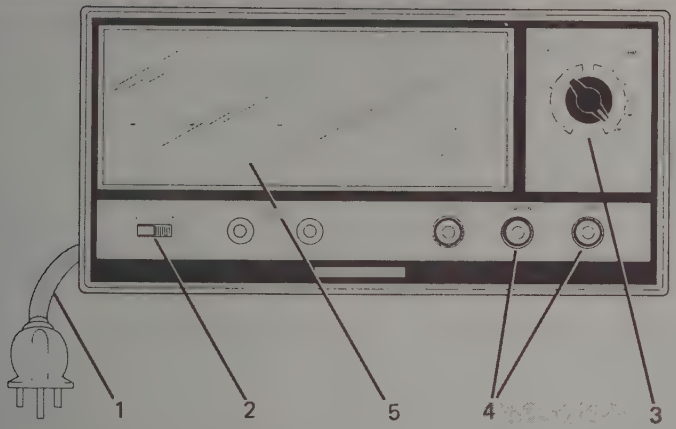

1. Connect power cord to AC power outlet.
2. Set ON/OFF switch to ON.
3. Set Function/Range switch to OHMS/15 M.
4. Connect unknown resistance across OHMS and COMMON terminals. Keep leads as short as possible.

NOTE

In any of the OHMS ranges with the input open, the Model 7050 readout will exceed full scale (1500) because the resistance between the terminals is that of the air gap.

5. Observe reading; decrease Function/Range switch OHMS setting until proper range is reached. Table below indicates proper readout limits for each setting. Readout is in KΩ or MΩ as indicated by the Function/Range switch setting.

Function/Range Setting	Proper Readout Limits
OHMS/1.5 K	.000 - 1.500
OHMS/15K	1.50 - 15.00
OHMS/150 K	15.0 - 150.0
OHMS/1.5 M	.150 - 1.500
OHMS/15 M	1.50 - 15.00

Figure 8. Resistance Measurement

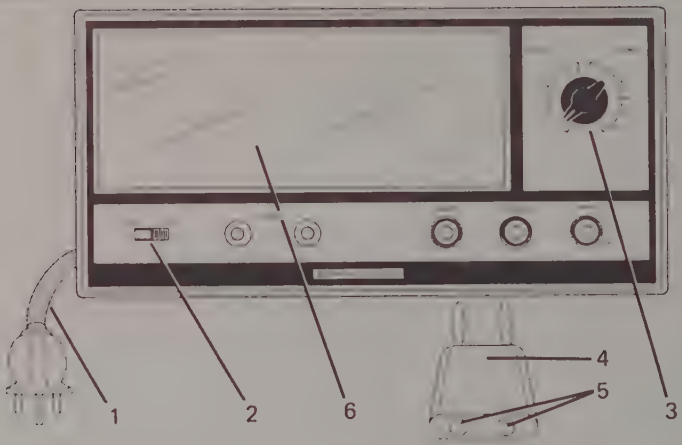

1. Connect power cord to AC power outlet.
2. Set ON/OFF switch to ON.
3. Set Function/Range switch to VOLTS/1.5 V.
4. Connect precision shunt resistance across VOLTS and COMMON terminals. Correct value of shunt for each full scale current range is given below.

Full Scale Current Range	Correct Value of Shunt Resistance
150.0 μA	10 kΩ
1.500 mA	1 kΩ
15.00 mA	100 Ω
150.0 mA	10 Ω
1.500 A	1 Ω

5. Connect unknown current source in series with terminals of shunt fixture.
6. Observe reading; if readout exceeds 1.500, an overload condition exists. Decrease value of shunt resistance to bring readout within permissable limits.
7. Convert reading to current measurement using formula below. Place decimal point as shown on applicable full scale current range.

$$I_{unknown} = \frac{V_{reading}}{R_{shunt}}$$

Figure 9. DC Current Measurement

THEORY OF OPERATION

INTRODUCTION

This section contains a discussion of the design and operating principles of the Fairchild Model 7050 Digital Multimeter. Theory of operation is discussed first at block diagram level, and then at detailed circuit level. The complete schematic diagram of circuits discussed in this section is included in the maintenance section of this manual.

OPERATING PRINCIPLES

The Model 7050 Digital Multimeter is a single chassis, self-contained unit that can be operated from 50-400 Hz primary power. The measurement circuitry can be switched so that the instrument will measure either DC volts or resistance. The paragraphs that follow describe each of these measurement circuits in terms of the block diagram and timing diagram shown in figure 10.

DC Voltage Measurement

Voltages from 0.001 V DC are applied across the VOLTS and COMMON terminals. Function/Range switch S1 is positioned for proper attenuation of the input signal. Critical resistors in the attenuator are made adjustable for calibration purposes. The attenuated signal appears at the input to a chopper stabilized amplifier. A DC amplifier provides additional voltage gain. Within the DC amplifier, polarity of the input signal is sensed. Polarity indication is discussed in detail on page 23. The output of the DC amplifier is connected back through the chopper to the chopper amplifier input. Operation is such that when the output from the DC amplifier equals the input to the chopper amplifier, the circuit is nulled. Nulling action is described below.

Chopper drive is derived from the clock and decade counters. Drive frequency is 120 Hz. As chopper Q16 is switched off, the two amplifier stages amplify any error signal (difference between input to chopper amplifier and output from DC amplifier), and feed the amplified error signal back, in phase, to one side of the chopper. The effect is to reduce the original error signal. This action continues until the output from the DC amplifier equals the input to the chopper amplifier. At this time, the amplifier is nulled, the voltage across the chopper is zero, and the DC amplifier output is impressed across 10 kΩ resistor R47.

The current that flows through R47 draws charge from integrating capacitor C10, one side of which is maintained at a fixed positive level by voltage divider resistors R26 and R39. The path by which current flows to R47 is determined by polarity of the input signal, but it is important to note that current is always drained FROM the integrating capacitor regardless of the polarity of the unknown input signal. Current is drawn from the integrating capacitor through the emitter followers in the DC amplifier out-

put circuit. For input signals of positive polarity, Q14 conducts, and the integrating capacitor discharges at a rate proportional to the magnitude of the unknown input signal. For negative polarity, Q17 conducts and current is drawn through super beta amplifier Q22/Q23. A change in the magnitude of the unknown input signal results in a proportional change in the current that drains from the integrating capacitor.

Each measurement cycle consists of two parts. During the first part, current is drained from the integrating capacitor by the unknown current while clock pulses feed continuously into the counter. At 4000 counts from the clock, the counter overspills to 0000 and the second part of the measurement cycle begins.

At overspill (t_1 on the timing diagram, figure 10), a full-scale pulse is emitted. This pulse triggers flip-flop FF1 which, in turn, closes reference current switch Q9. Now the integrating capacitor recharges at a rate proportional to the reference current minus the unknown current (t_1 to t_2 on the timing diagram). When the voltage across the integrating capacitor reaches zero (t_2), the level detector changes the state of FF1 which then: a. turns off current reference switch Q9, and b. enables the strobe one-shot multivibrator. The strobe pulse performs two functions:

a. It temporarily disables the clock.

b. It gates the buffer/storage units so that the count stored at that particular instant is presented to the readout tubes for display. The input circuit, the measurement circuit, and the clock are calibrated to give a direct visual readout in volts.

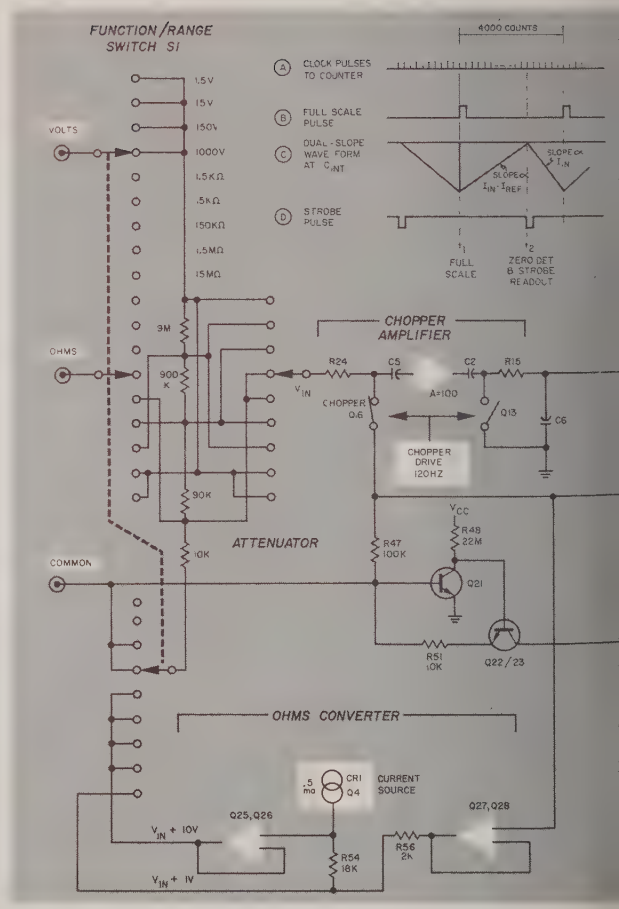

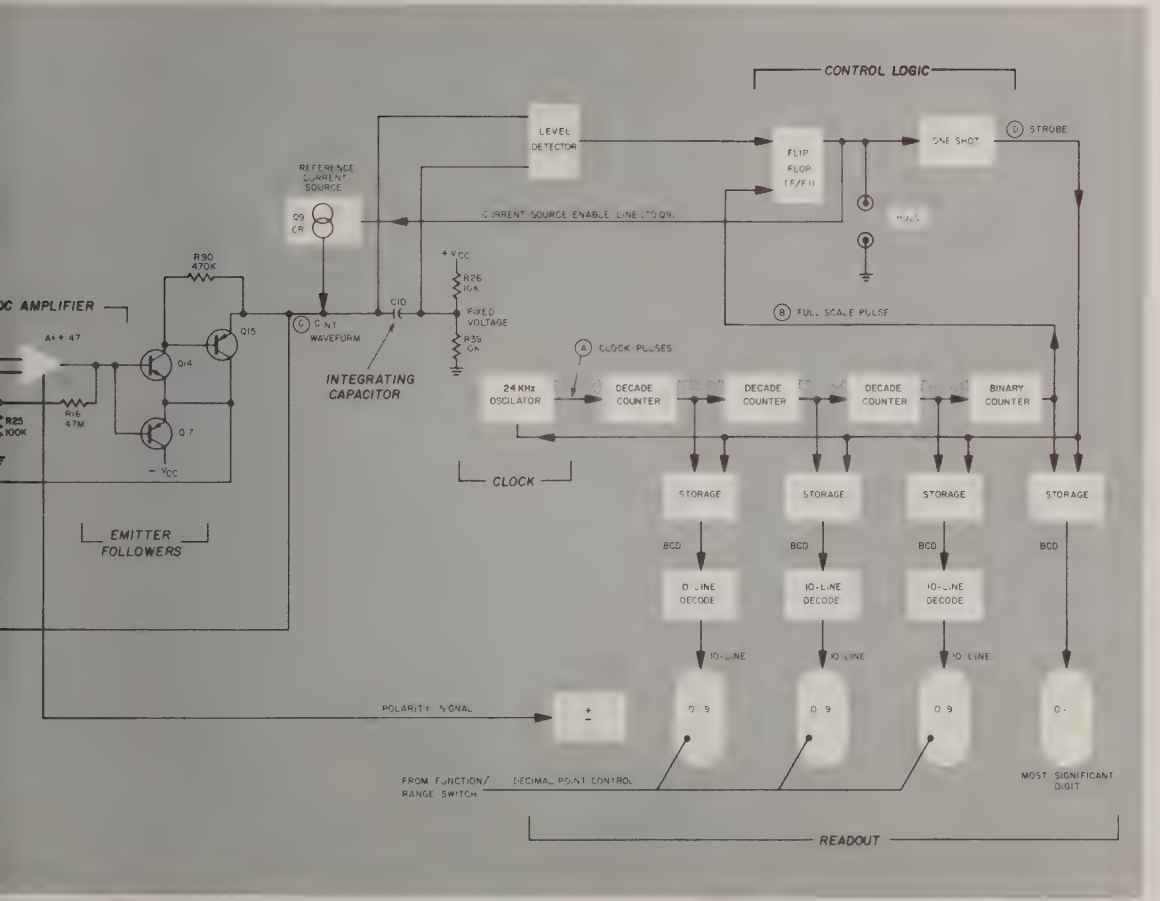

Figure 10. Model 7050 Block Diagram

The clock is delayed just long enough to prevent a count during the strobe pulse. It then resumes generating pulses while the unknown input current again discharges the integrating capacitor until another full-scale pulse is generated. Measurement cycles automatically continue in this fashion and readout is continuous. However, the automatic measurement cycle is disrupted if a short is inserted between the HOLD terminals. The short disables the strobe pulse and the last display is held until the short is removed.

Resistance Measurement

Resistance to be measured is connected between the OHMS and COMMON terminals. Function/Range switch S1 is positioned to program a calibrated current that flows through the unknown resistance. The resulting voltage drop is measured with the basic DC measuring system. The test current is generated in a feedback circuit that consists of an amplifier and ranging resistors. The ranging resistors are switched into the circuit by the Function/Range switch and are used to program test currents of 100 nA, 1 μA, 10 μA, 100 μA, or 1 mA. The voltage appearing at the input to the chopper-stabilized amplifier is proportional to the value of the unknown resistance. The DC section of the instrument measures proportional voltage and readout is given as kΩ or MΩ.

DETAILED CIRCUIT DESCRIPTION

The following paragraphs describe in detail the operation of the individual circuits within the Model 7050.

Function/Range Switch and Input Attenuator

Voltages to be measured are applied between the VOLTS and COMMON terminals. Resistances are applied between OHMS and COMMON terminals. Input signals are routed to a Function/Range switch that consists of six ganged wafers. One wafer (S1-C) switches the input COMMON when the Function is changed. Another (S1-F) sets range indication by grounding the cathode of the proper decimal point indicator in the readout tubes. One wafer (S1-D) grounds the cathodes of the polarity indicating lamps when the Function/Range switch is in any of the VOLTS ranges. The remaining three wafers (S1-A, B, E) route the input signal through attenuating resistors to the input amplifier. Potentiometer R45 calibrates the 1000 V range. R36 calibrates the 150 V range. R28 calibrates the 15 V range.

Input Amplifiers

The attenuated input signal is applied to the chopper stabilized amplifier. A metal oxide silicon field effect transistor (MOS FET), shown as Q16 on figure 11, is utilized as the chopper. The chopper is driven on and off alternately with solid state switch Q13. The drain lead of Q16 is tied to the input of the AC carrier amplifier. The source lead is tied to the output of the DC amplifier for a closed loop. When chopper Q16 is on, the potential at the junction of R24 and C5 is chopped to the level of the DC amplifier output. As the chopper is driven on, any potential difference that exists between the amplifier input and output is coupled through C5 to the amplifier input as an error signal. This error signal is amplified and fed back in phase to the source lead of Q16. When the voltages at

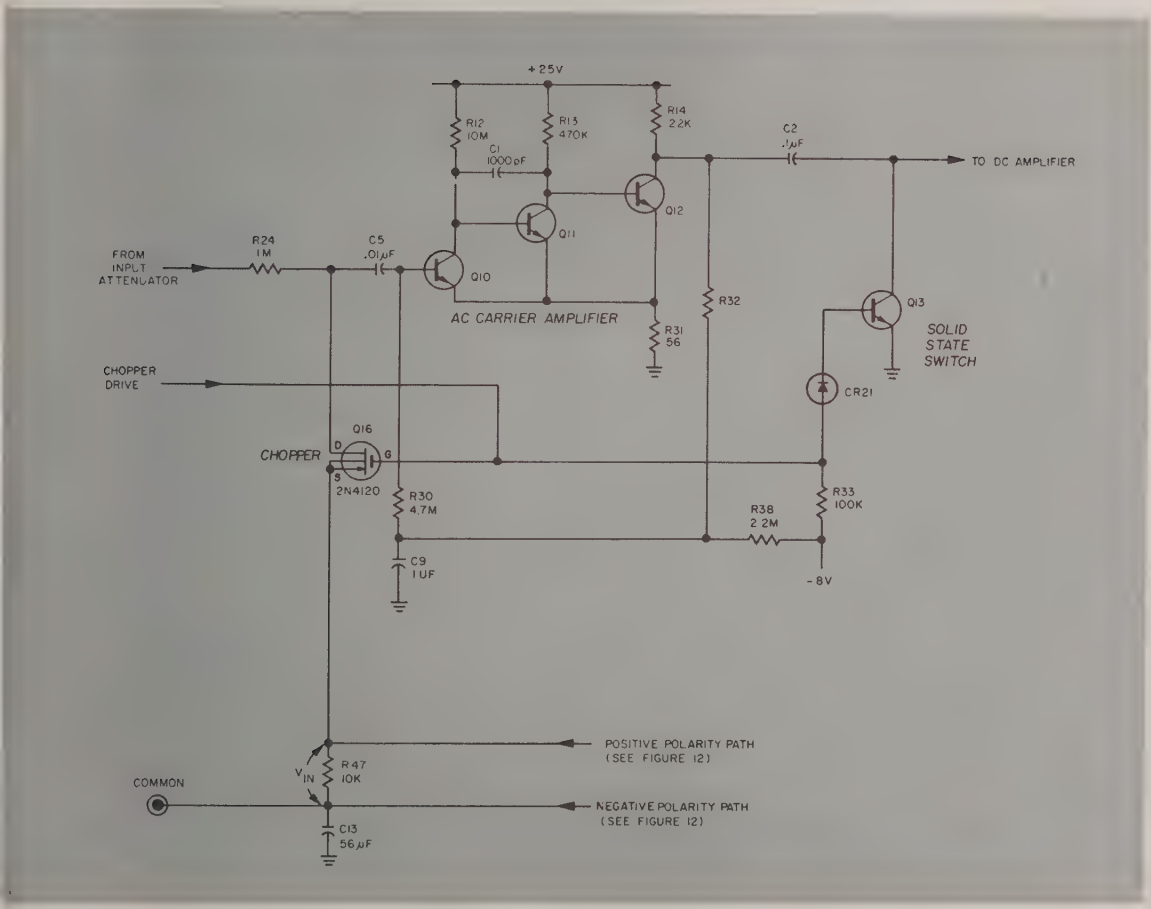

Figure 11. Chopper Amplifier

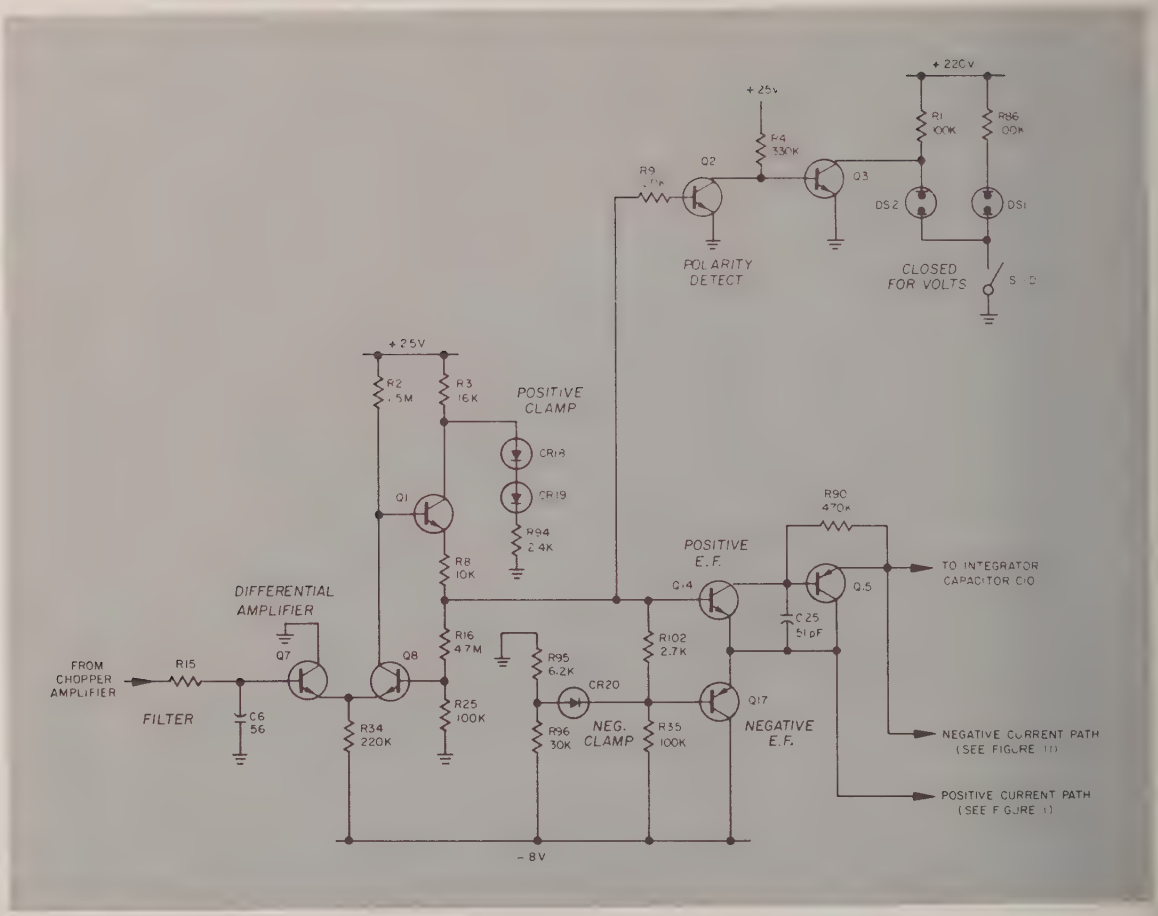

Figure 12. DC Amplifier

the DC amplifier output and AC carrier amplifier input reach the same level, the amplifier is stabilized and the total equivalent unknown input is impressed across 10 kΩ resistor R47. The current that must flow through R47 draws charge from the integrating capacitor C10.

Chopper Amplifier: When chopper Q16 is driven on, the voltage at its drain (V_{in}) is chopped to the level of its source. The voltage step (it may be positive or negative according to polarity of the input signal) is coupled through C5, amplified and inverted in Q10, Q11, Q12, and then is coupled through C2 to the collector of Q13. Transistor Q13 is off at this time so the voltage step is integrated (filtered by R15 and C6 (figure 12) and applied to the input of the DC amplifier.

When Q16 goes from on to off, any voltage change at its drain is amplified and appears inverted at the collector of Q13. But this time Q13 is turned on so the signal is grounded.

DC Amplifier: Transistors Q7 and Q8 comprise a differential amplifier as shown in figure 12. The voltage at the base of Q8 follows the voltage at the base of Q7. Emitter follower Q14/Q17 conducts (Q14 conducts for input signals of positive polarity; Q17 conducts for input signals of negative polarity) and the voltage step is fed back to the source of Q16. The step is in phase with the input signal; therefore the voltage across the chopper approaches zero. Diodes CR18 and CR19 comprise a clamp for positive polarity input signals. Resistor R95 and diode CR20 comprise a clamp for negative polarity input signals.

Polarity Indication: The polarity indicator consists of lamps DS1 and DS2. (See figure 12.) When ionized, DS1 presents a horizontal bar of light at the readout panel and DS2 presents a vertical bar of light. The two lamps function together to give +(both lamps on) or −(DS1 on, DS2 off).

When a voltage range is selected, the cathodes of DS1 and DS2 are set to ground via S1-D. The lamps' anodes are connected through 100 kΩ (R1 and R86) to +200 V. In addition, the anode of DS2 is connected to the collector of Q3 in the DC amplifier. For DC voltage inputs of negative polarity, Q3 is turned on so that DS2 is held off. DS1 remains ionized and a negative indication results. For positive-polarity input voltages, Q3 is turned off by solid-state switch Q2. Then the voltage at the anode of DS2 rises to allow the lamp to light and give the vertical bar-portion of the (+) indication.

Reference Current Source

The reference current that recharges the integrating capacitor during the second part of each measurement cycle is delivered by Q9. See figure 13. This current generator is switched off when the zero detector is enabled and held off until the full scale pulse is emitted. Reference for the current source is established by zener diode CR1. When Q9 is held off, the current flowing through CR1 is drained through CR2 to ground. When Q9 is switched on, the 6.8 V zener breakdown across CR1 fixes the voltage at the base of Q9. This causes Q9 to conduct and produce a stable reference current. Potentiometer R5 adjusts the current amplitude.

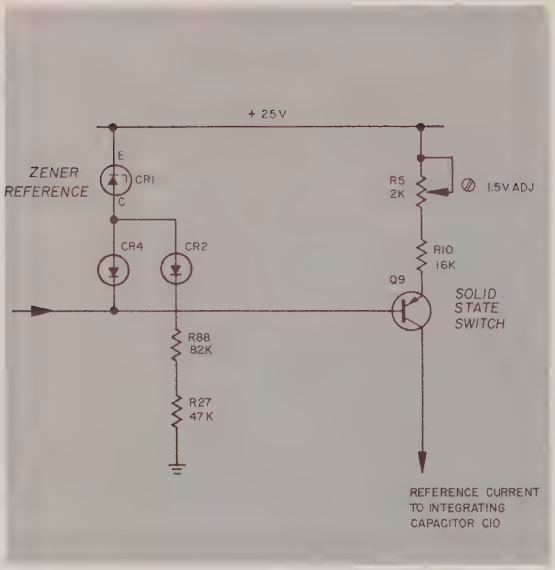

Figure 13. Current Reference Source

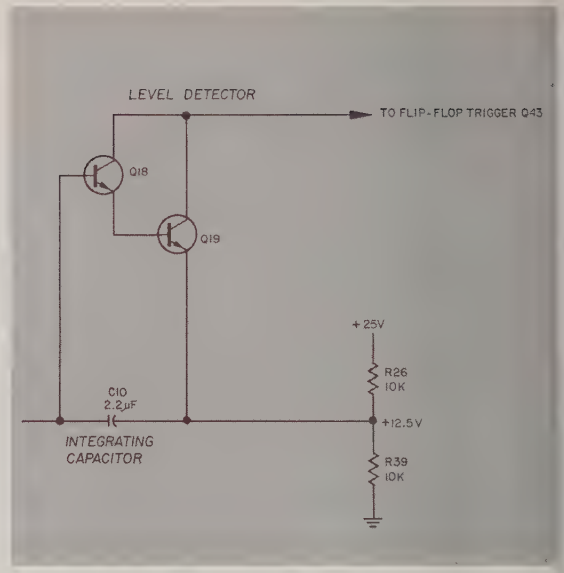

Figure 14. Integrator, Capacitor and Level Detector

Integrator C10

One side of integrating capacitor C10 is connected to a voltage divider (R26/R39) that fixes the voltage to +12.5 V. Refer to figure 14. The voltage on the other side of C10 is discharged during the first part of a measurement cycle by the input signal. During the second part of the cycle, it is re-charged by a current equal to the reference current minus the input current. When the voltage returns to +12.5 V (plus a small offset voltage), the level detector is triggered.

Level Detector

The level detector consists of transistors Q18 and Q19, connected in a Darlington configuration. See figure 14. This configuration provides high current gain. When the voltage across C10 reaches zero volts (12.5 V on both sides) plus a small offset, the base-emitter junction of Q18 and Q19 become forward biased. The voltage at the collector of Q19 drops and flip-flop steering transistor Q43 is turned on.

Flip-Flop

Flip-flop Q5/Q6 (see figure 24) controls action of the current reference switch and the strobe generator. Every time the counter reaches full-scale, the last counting unit emits a positive spike (full-scale pulse). This pulse triggers the flip-flop via steering diode CR6. The positive pulse turns Q5 off and Q6 is turned on through regenerative coupling. When Q5 goes off, it allows current reference switch Q9 to conduct, and current from the reference source flows into the integrating capacitor. When the capacitor has recharged, the zero detector is enabled and produces a negative-going output pulse which turns on solid-state switch Q43. This turns Q6 off. When Q6 goes off, Q5 goes on through regenerative coupling. When Q5 goes on, the voltage at its collector goes high and the positive spike, a. turns current reference switch Q9 off, and b. triggers the strobe one-shot multivibrator.

Strobe One-Shot and Readout Hold

The strobe one-shot multivibrator consists of transistor Q20 and RC network R40-R42, C11. See figure 24. At time t_2 (zero detect) in the measurement cycle, Q5 in the flip-flop goes on and produces a positive pulse output. The positive pulse is coupled through C11 to turn Q20 off. Values of C11, R40-R42 are chosen to hold Q20 off for 5 μsec. Hence the strobe pulse is a -0.5 V pulse of 5 μsec duration. The strobe pulse a. turns the clock off temporarily, and b. gates the buffer storage units so that the count in the counting units can be displayed.

Clock

The time base used in the Model 7050 is a 24 kHz oscillator. The oscillator consists of a Fairchild Semiconductor μL914 Dual 2-Input Gate whose outputs have been cross-connected to form a bistable multivibrator. See figure 24. R79, R85 and C20, C22 are chosen to give an output frequency of 24 kHz. The equivalent circuit of the μL914 element component is shown in figure 15.

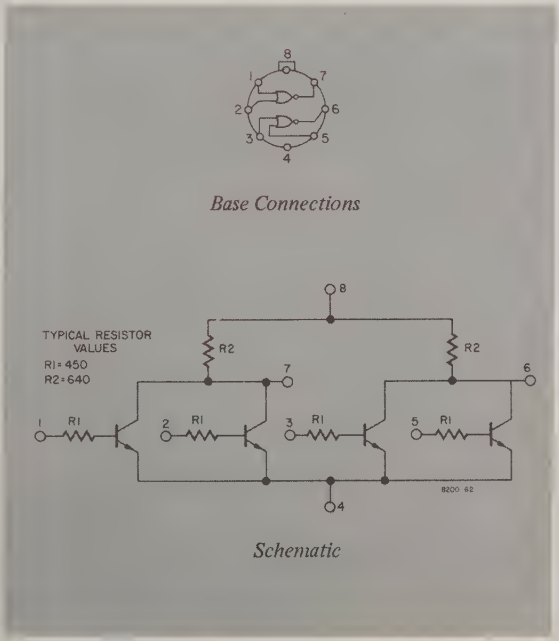

Figure 15. FS μL914 Dual 2-Input Gate

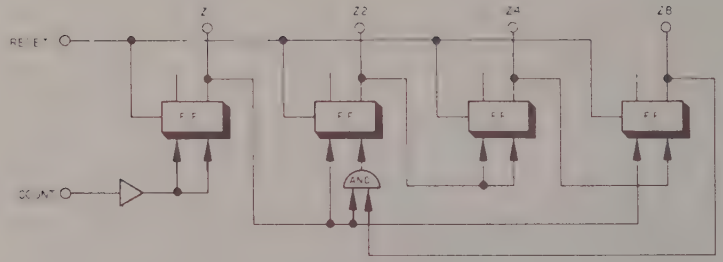

Block Diagram

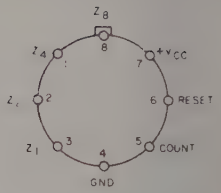

Base Connections

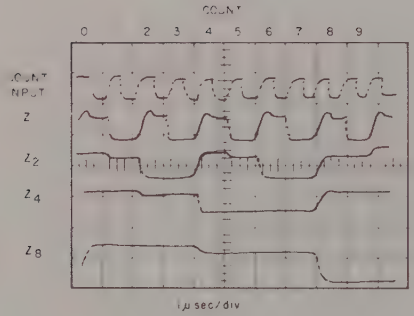

Timing Waveforms

COUNT

	0	1	2	3	4	5	6	7	8	9
Z_1	H	L	H	L	H	L	H	L	H	L
Z_2	H	H	L	L	H	H	L	L	H	H
Z_4	H	H	H	H	L	L	L	L	H	H
Z_8	H	H	H	H	H	H	H	H	L	L

H = HIGH L = LOW

Truth Table

Figure 16. FS CμL958 Counter Element

Counter and Readout

The 24 kHz clock output drives three cascaded decade counters (Fairchild Semiconductor CμL958 elements) and one binary counter (FS μL926 element). Each CμL958 element consists of four binary triggered flip-flops modified by a feedback loop to count in 1-2-4-8 binary-coded-decimal. Figure 16 shows block diagram base connections, and table of output states for a typical CμL958 element. The BCD count produced in the decade counters is stored in FS CμL959 Buffer/Storage elements until a strobe pulse occurs. A strobe pulse triggers the storage elements, allowing each of them to transfer its BCD data to an FS CμL960 decimal decoder/driver.

An FS CμL959 buffer/storage unit consists of four gated latch circuits and a common gate driver. Input characteristics of the latch circuits match the CμL958 decade counter output characteristics. The buffer allows the state of the counter outputs to be sampled and held for an indefinite amount of time. Each time a strobe pulse occurs, the FS CμL958 counter outputs are transferred into the buffer elements. Characteristics of an FS CμL959 buffer/storage element are summarized in figure 17.

The FS CμL960 Decimal Decoder/Driver elements accept the 1-2-4-8 BCD output from their respective storage elements and transform the BCD count into 10 mutually exclusive outputs which directly control the ionizing potentials of the gas filled, cold cathode display tubes. Ten individual lines between each driver/tube pair provide for a one digit display of any number from 0 to 9. Operation of the FS CμL960 Decade Decoder/Driver is depicted in figure 18.

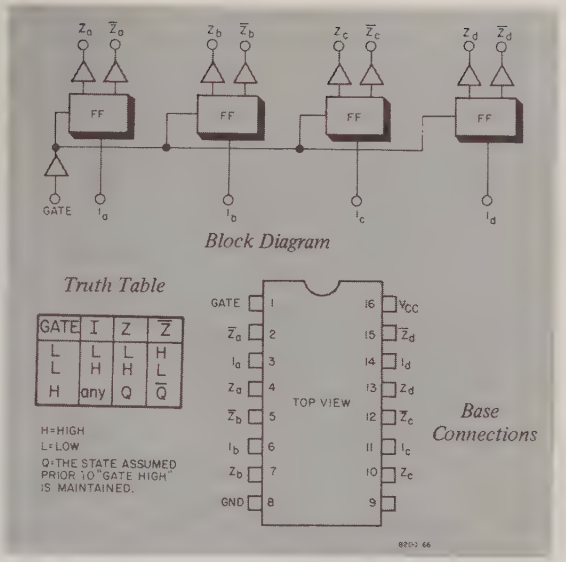

Figure 17. FS CμL959 Buffer/Storage Element

As the count exceeds 999, the "8" output from the last FS CμL958 element goes high and drives Q35. The collector of Q35 is connected to pin 3 of QA7. When Q35 is turned on, the voltage at its collector goes low and QA7 is triggered. QA7 is an FS μL926 JK flip-flop. Its function is to control bistable multivibrator Q31/Q32 which operates lamp DS3. Q31 and Q32 normally are held off and CR10, CR11 are back biased. During the strobe pulse, the voltage drops at the emitters of Q31 and Q32. This allows the output state of QA7 to be sampled. If pin 7 is high and pin 9 is low, CR11 becomes forward biased; Q32

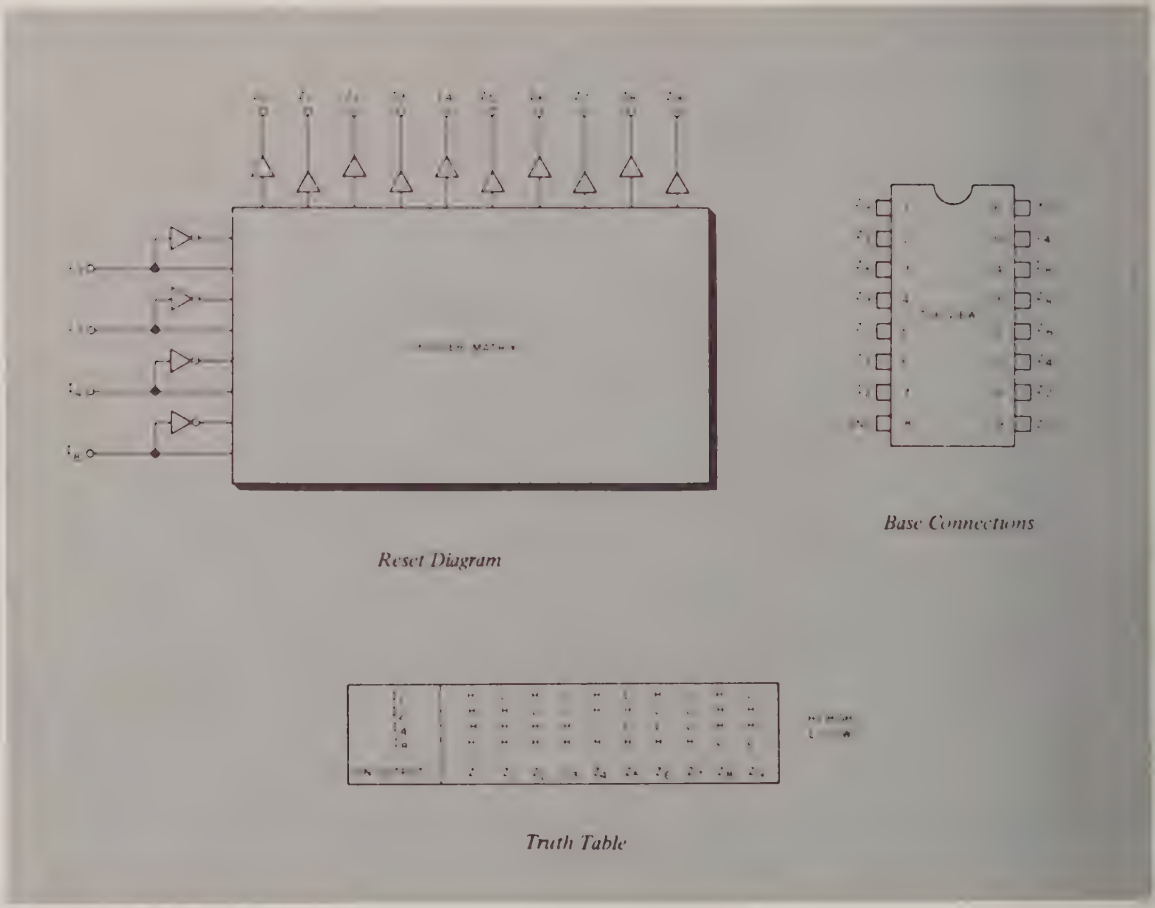

Reset Diagram

Base Connections

Truth Table

Figure 18. FS CμL960 Decimal Decoder/Driver Element

is turned on and Q31 is turned off. When Q32 is on, Q40 is allowed to conduct. This creates a voltage drop across DS3 and a "1" appears as the most significant digit in the readout.

Chopper Drive

The chopper in the chopper amplifier is an FI 2N4120 MOS FET. Operation of an FI 2N4120 is such that the gate must be biased approximately 4 V negative with respect to the source before the device will turn on. The chopper drive circuit has been designed to produce a square waveform that alternates between +1.2 V and -6 V. The positive 1.2 V signal is necessary because of the junction drop across CR2 and Q13. See figure 19. Chopper drive is derived from the clock

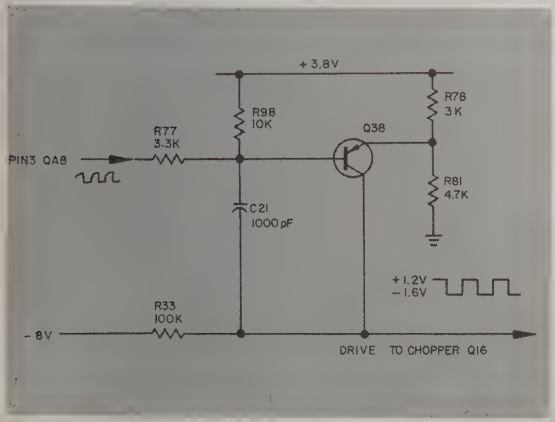

Figure 19. Chopper Drive Circuit

and counter as follows: QA8 is the third FS CμL958 element in the series decade counters. The first two counter elements divide the 24 kHz clock output by 100. The first flip-flop circuit in QA8 divides the 240 Hz input to QA8 by two. The resultant 120 Hz output at pin 3 of QA8 triggers driver Q38. The square waveform appearing at the collector of Q38 alternates between +1.2 V and -6 V. This output is used to drive chopper Q16 and solid-state switch Q13.

Ohms Converter

The ohms converter (figure 20) is switched into the measurement circuit when an OHMS range is selected on the Function/Range switch. The ohms converter includes a bootstrap amplifier that produces two outputs. One output is used for the 15 MΩ range only. This output adds 1 V to the voltage at the amplifier input. The other output is used for all OHMS ranges except 15 MΩ. This output adds 10 V to the amplifier input. When a particular OHMS range is selected, the appropriate output voltage is connected to the low end of the attenuator. The attenuator programs a test current that flows through the unknown resistance connected between the OHMS and COMMON terminals. Test currents are 0.1 μA (15 MΩ range), 1 μA (1.5 MΩ range), 0.01 mA (150 kΩ range), 0.1 mA (15 kΩ range), and 1 mA (1.5 kΩ range).

The voltage drop across the unknown resistor is measured with the DC voltage measuring portion of the instrument.

Q4 is a current source for the ohms converter. The zener breakdown potential of CR1 provides reference for the current source. Current from Q4 flows

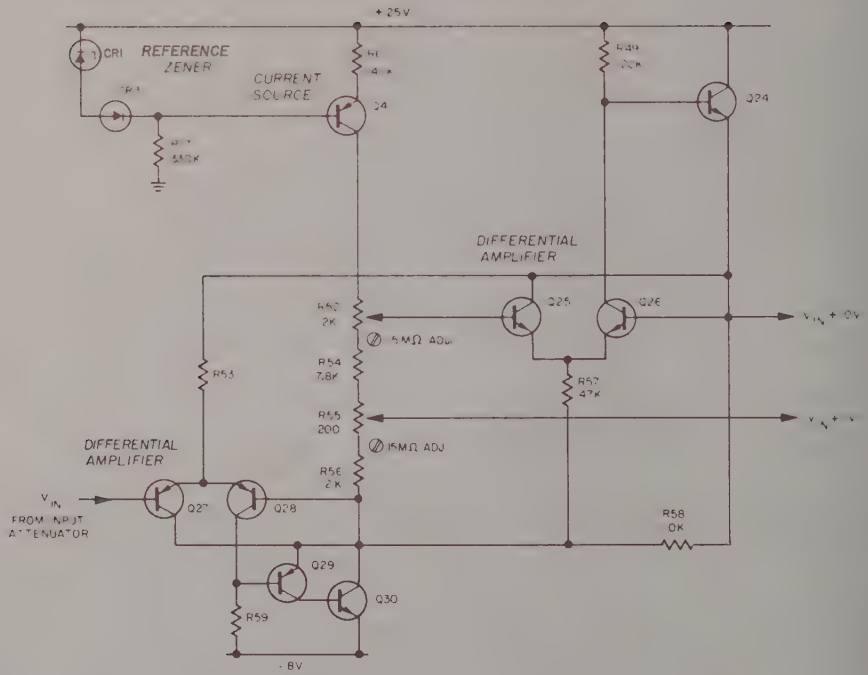

Figure 20. Ohms Converter

through R52, R54, R55, and through Q30. Transistors Q27 and Q28 comprise a differential amplifier. The voltage at the base of Q27 is always directly proportional to the value of the unknown resistance. An increase in V_{in} causes Q27 to conduct less and Q28 to conduct more. This causes Q25 to conduct harder because of the increased voltage appearing at R52. The voltage at the base of Q26 rises to follow the voltage at the base of Q25 and hence to remain 10 V above the voltage at the input to the ohms converter (base of Q27). By this action, the output at the base of Q26 is always equal to the voltage at the base of Q27 plus 10 volts.

The output for the 15 MΩ range appears on the wiper arm of R55. Because of the bootstrap action, this output voltage is always 1 V above the voltage at the base of Q27.

Power Supply

The power supply in the Model 7050 produces output levels of +220 V, +25 V, +3.8 V and -8 V. See figure 21. The +220 V output is used to supply anode potentials for display tubes and lamps. The +25 V and -8 V supplies are used in control logic and the analog-to-digital converter. The +3.8 V supply is used with the low-level micrologic elements.

The +220 V output is taken from the secondary of T1 and full-wave rectified by CR7 and CR8. Capacitor C16 reduces ripple in the +220 V output.

Reference for the +25 V, +3.8 V and -8 V supply outputs is established by the zener breakdown of CR14. This zener diode is an S20943 transistor that has its collector lead open circuited and its base and emitter terminals connected as shown in figure 21. The emitter-to-base breakdown potential of CR14 establishes a reference voltage at the emitter of Q37. The base lead of Q37 is connected to the junction of sensing resistors R74 and R80. Any variation in the +25 V output is sensed across these two resistors and detected at the base of Q37. If the output voltage decreases due to a load change, the decrease will cause Q37 to conduct less. The voltage rises at the base of series regulator Q33. Hence Q33 conducts harder and compensates for the drop in output voltage. C26 is an output filter for the +25 V supply.

The +25 V supply provides reference for the -8 V supply. Sensing resistors R84 and R85 are connected between the +25 V output and the -8 V output. Assuming that the +25 V output is absolutely stable, the slightest variation in the -8 V output will be sensed across R84 and R85. The variation is sensed at the base of Q39. For instance, a drop in the output voltage (less negative) causes the voltage at the base of Q39 to rise and Q39 conducts less. The voltage at the base of Q41 drops and Q41 conducts harder to accomplish regulation. CR15 rectifies the transformer output and C23 filters the rectified input signal. Resistors R73 and R75 comprise a voltage divider that fixes the voltage at the base of Q36. Q36 acts as a constant current source and fixes the voltage at the base of Q34. If the voltage at the emitter of Q34 tends to drop, Q34 will conduct harder and compensate for the drop. The +3.8 V output also is dependent on the +25 V supply.

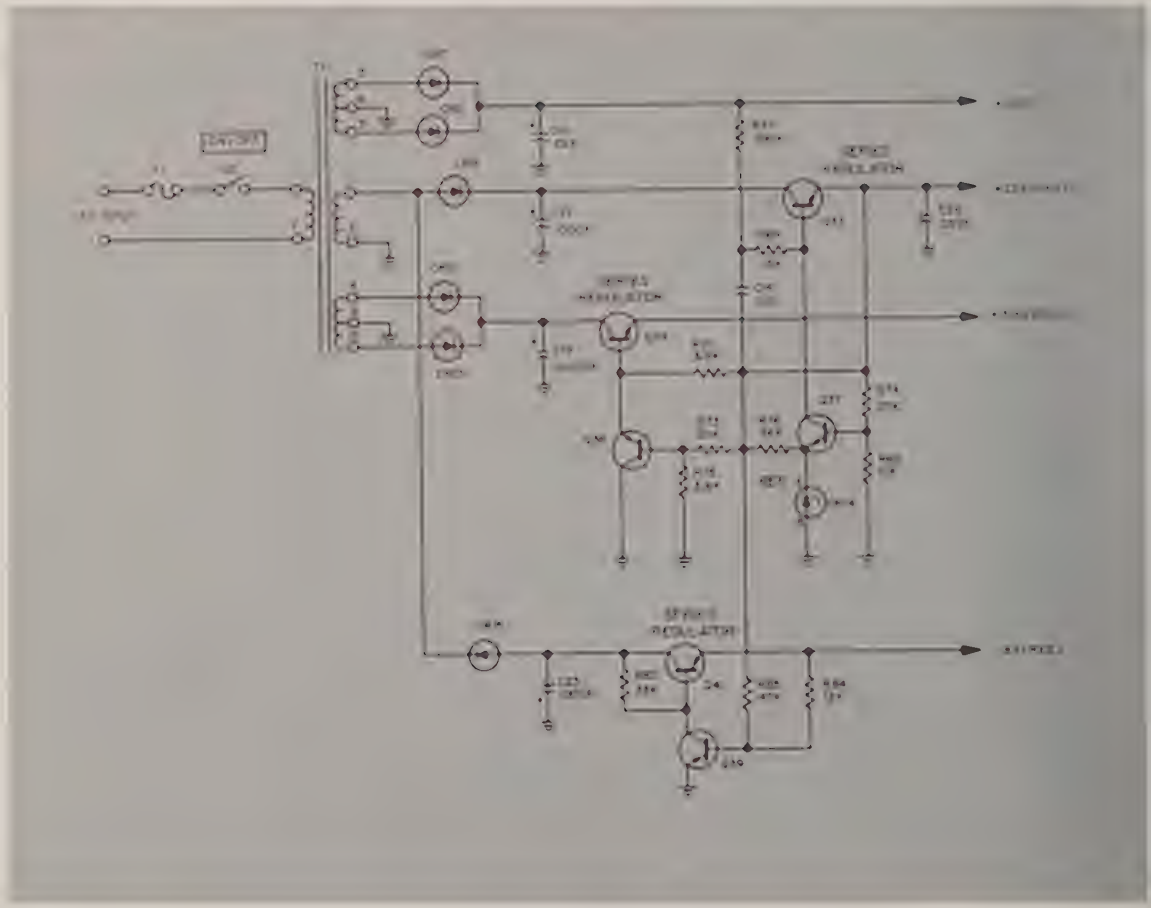

Figure 21. Power Supply

INTRODUCTION

This section contains information for calibration, maintenance, and troubleshooting of the Model 7050.

TEST EQUIPMENT REQUIRED

Table 1 lists test equipment required for checking performance, troubleshooting, and calibration of the Model 7050.

In procedures involving accurate DC voltage or resistance measurements, care must be taken to ensure consistent results. Working standards should be referred to primary standards on a regular basis. Particular care should be taken with resistance standards that are subject to long-term drift due to aging.

Table 1. Required Test Equipment

Equipment Type	Purpose	Required Specification	Recommended Instrument
DC Voltage Standard	DC voltage alignment and calibration	Accuracy: ±0.02% Range: 1 mV to 1000 V	Fluke Model 332A
Resistance Standard	Resistance alignment and calibration	Accuracy: ±0.05% Range: 1 Ω to 15 MΩ	Electro Scientific Industries Model DB 877
Auto-Transformer	Line voltage check	Range: 60 to 130 V AC 2 A max. current	General Radio Type W5MT3W
Oscilloscope	Troubleshooting	Vertical Sensitivity: 5 mV	Fairchild Model 767H
DC Current Standard	Provide DC current for optional DC current operation check	Current Range: 0.01 μA to 1 A Accuracy: 0.02%	Fluke Model 382A

PERFORMANCE CHECK

The performance check outlined in the following paragraphs is used to verify the specifications of the Model 7050. It can be used upon receipt of a new instrument, for routine preventive maintenance, and following repair.

NOTE

If the instrument fails to meet the performance check at any time, proceed to the appropriate calibration procedure to correct the malfunction.

Voltage Accuracy Check

To check DC voltage measurement accuracy, proceed as follows:

a. Connect power cord to AC power source and make following initial front panel control settings:

Function/Range switch ..... VOLTS/1.5 V
ON/OFF switch ..... ON

b. Connect a short between VOLTS and COMMON terminals on Model 7050. Check that readout is between 0.000 and ±0.001. Remove short from VOLTS and COMMON terminals.

c. Set output of voltage standard to zero. Connect VOLTS and COMMON terminals on Model 7050 to (+) and (-) output terminals respectively on voltage standard.

d. Consult table 2 and set voltage standard to output levels listed. Select appropriate Range setting on Model 7050. Check that in each case readout is within tolerance given.

e. Reverse polarity of voltage standard and repeat tests listed in table 2. Check that all readings are within tolerance, but of opposite polarity.

f. Reduce voltage standard to zero and remove input leads from Model 7050.

Table 2. DC Voltage Measurement Accuracy at 25°C

Voltage Standard	Function/Range Switch Setting	Readout Limits	
		Min.	Max.
Input Short	VOLTS 1.5 V	± .000	± .001
+0.003 Vdc		+ .002	+ .004
+0.010 Vdc		+ .009	+ .011
+0.100 Vdc		+ .099	+ .101
+0.500 Vdc		+ .499	+ .501
+1.000 Vdc		+ .998	+1.002
+1.500 Vdc		+1.498	+1.502
+01.50 Vdc	VOLTS 15 V	+ 1.49	+ 1.51
+15.00 Vdc		+14.98	+15.02
+015.0 Vdc	VOLTS 150 V	+ 14.9	+ 15.1
+150.0 Vdc		+14 9.8	+15 0.2
+0150 Vdc	VOLTS 1 kV	+ 149	+ 151
+1000 Vdc		+ 998	+1002

Current Accuracy Check

To check resistance measurement accuracy, proceed as follows:

a. Connect power cord to AC power source and make following initial front panel control settings:

Function/Range switch ..... VOLTS/1.5 V
ON/OFF switch ..... ON

b. Connect precision 10 kΩ current shunt across VOLTS–COMMON terminals as described in figure 9. Connect DC current standard in series with precision shunt.

CAUTION

TAKE CARE THAT TEST CURRENT DOES NOT EXCEED FULL SCALE CURRENT INDICATED ON PRECISION SHUNT BEING USED. EXCESSIVE CURRENT WILL CAUSE PERMANENT DAMAGE TO THE PRECISION SHUNT RESISTOR.

c. Consult table 3 and set current standard to values listed. Check that in each case readout is within tolerance given. NOTE: Conventional current, defined as flowing from (+) to (-), will produce a (+) indication as it flows into the side of the precision shunt that is connected to the VOLTS terminal, and out of the side that is connected to the COMMON terminal.

d. Remove current standard from Model 7050.

Table 3. DC Current Measurement Accuracy at 25°C

Current Shunt	Standard DC Current	Readout Limits	
		Max.	Min.
10 kΩ	0.000	+ .001	- .001
10 kΩ	+75.00 μA	+ .753	+ .747
10 kΩ	+150.0 μA	+1.504	+1.496
1 kΩ	+0.500 mA	+ .502	+ .498
1 kΩ	+1.000 mA	+1.003	+ .997
1 kΩ	+1.500 mA	+1.504	+1.496
100 Ω	+ 5.00 mA	+ .502	+ .502
100 Ω	+10.00 mA	+1.003	+ .997
100 Ω	+15.00 mA	+1.504	+1.496
10 Ω	+ 50 mA	+ .502	+ .498
10 Ω	+ 100 mA	+1.003	+ .997
10 Ω	+ 150 mA	+1.504	+1.496
1 Ω	+ 0.500 A	+ .503	+ .497
1 Ω	+ 1.000 A	+1.005	+ .995
1 Ω	+ 1.500 A	+1.507	+1.493

Resistance Accuracy Check

To check resistance measurement accuracy, proceed as follows:

a. Connect power cord to AC power source and make following front panel control settings:

Function/Range switch ..... OHMS/1.5 K
ON/OFF switch ..... ON

b. Connect resistance standard between OHMS and COMMON terminals on Model 7050.

c. Consult table 4 and set resistance standard to values listed. Set Model 7050 Function/Range switch to appropriate settings. Check that in each case readout is within tolerance given.

d. Remove resistance standard from Model 7050.

CALIBRATION PROCEDURE

Figure 22 details the procedure required to calibrate the Model 7050 and also identifies the calibration controls at the rear of the instrument.

PARTS LOCATION AND SCHEMATIC

Figure 23 shows the location of all components contained in the Model 7050 and figure 24 is a detailed schematic of the unit.

Table 4. Resistance Measurement Accuracy at 25°C

Resistance Standard	Function/Range Switch Setting	Readout Limits	
		Min.	Max.
0.000	OHMS 1.5 k	.000	.001
0.003 kΩ		.002	.004
0.100 kΩ		.099	.101
0.500 kΩ		.498	.502
1.000 kΩ		.997	1.003
1.500 kΩ		1.496	1.504
01.50 kΩ	OHMS 15 k	1.49	1.51
15.00 kΩ		14.96	15.04
015.0 kΩ	OHMS 150 k	14.9	15.1
150.0 kΩ		149.6	150.4
0.150 MΩ	OHMS 1.5 M	.148	.152
1.500 MΩ		1.484	1.516
01.50 MΩ	OHMS 15 M	1.46	1.54
15.00 MΩ		14.69	15.31

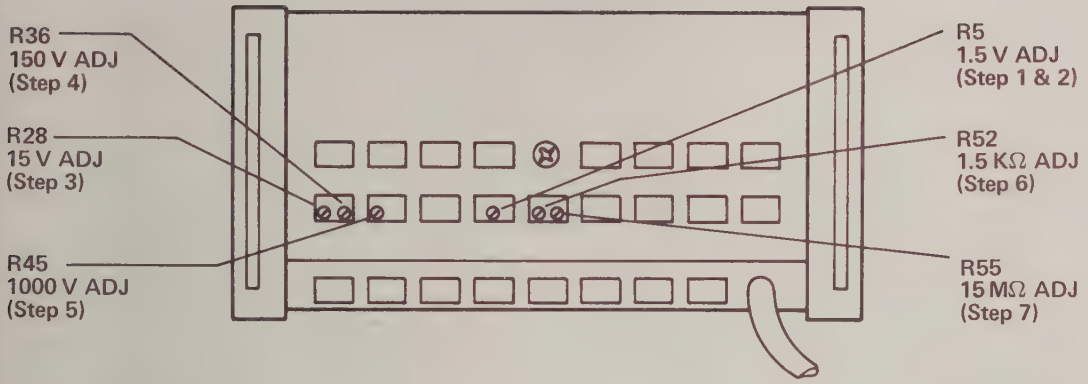

Step	Function/Range Switch Setting	Input	Adjustment
1	VOLTS/1.5 V	+1.500 V DC	Adjust R5 for readout of +1.500
2	VOLTS/1.5 V	-1.500 V DC	No adjustment. Readout should be -1.500 ±1 digit.
3	VOLTS/15 V	+15.00 V DC	Adjust R28 for readout of +15.00
4	VOLTS/150 V	+150.0 V DC	Adjust R36 for readout of +150.0
5	VOLTS/1 kV	+1000.0 V DC	Adjust R45 for readout of +1000
6	OHMS/1.5 k	1.500 kΩ	Adjust R52 for readout of 1.500
7	OHMS/15 M	15.000 MΩ	Adjust R55 for readout of 15.00

Figure 22. Calibration Instructions

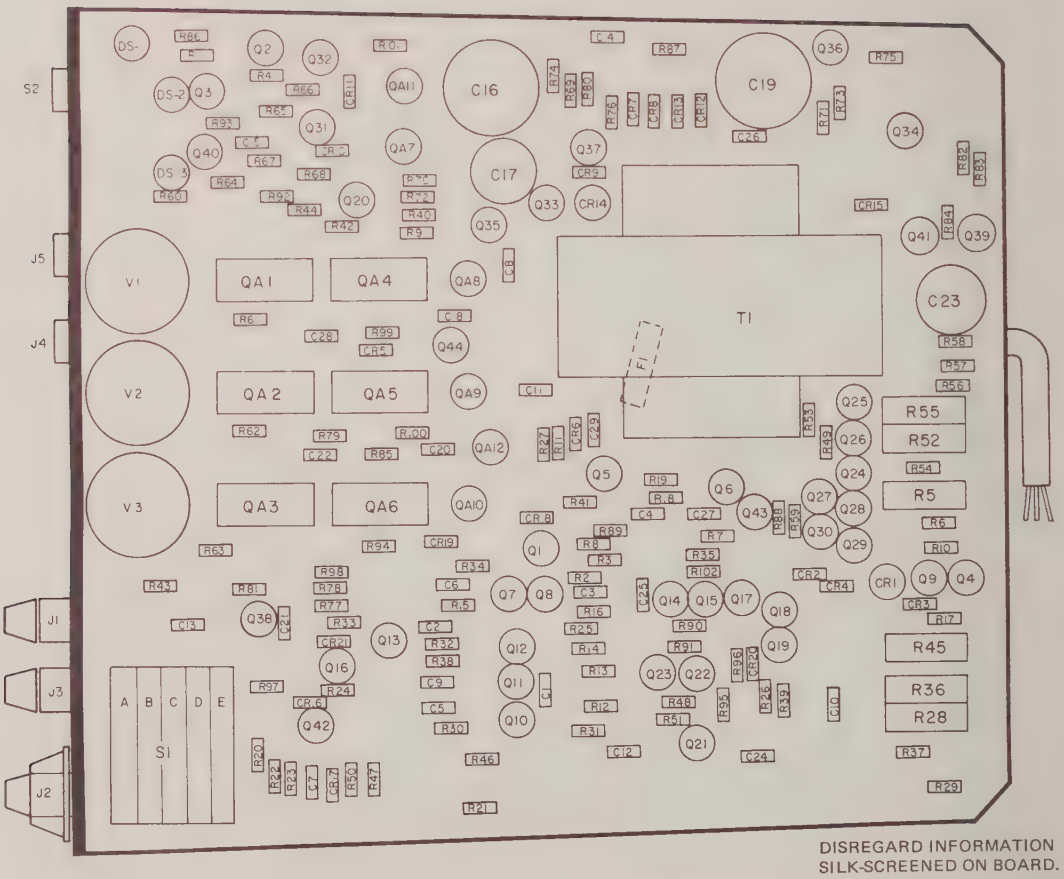

Figure 23. Model 7050 Component Location

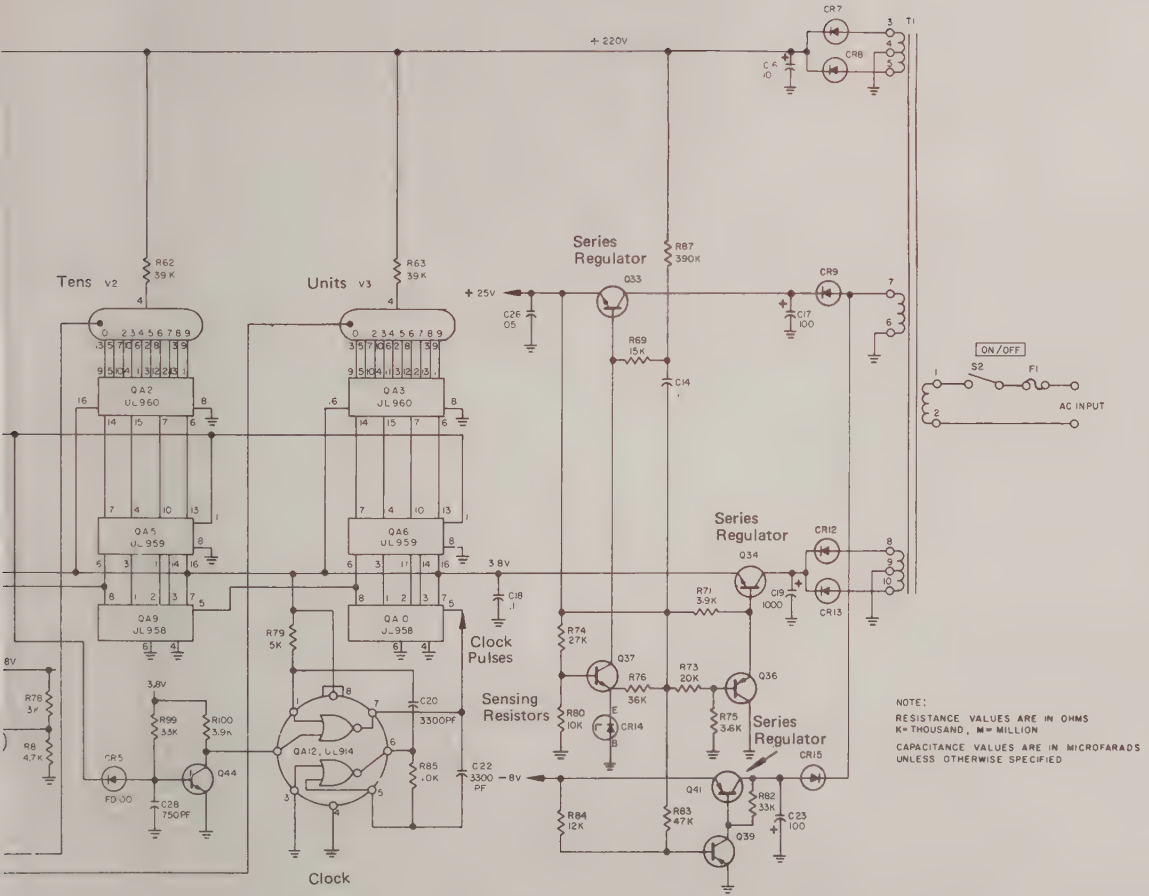

Figure 24. Model 7050 Schematic Diagram

REPLACEMENT PARTS

GENERAL

Tables 5 and 6 contain information for ordering replacement parts and lists: circuit reference, description, manufacturer, and Fairchild Instrumentation part number. Physical location of electrical components and mechanical items are called out in figure 23 and are cross-referenced with the parts list through circuit reference numbers.

ORDERING INFORMATION

To order a replacement part, address the order to an authorized Fairchild Instrumentation sales representative, or to: 974 East Arques Avenue, Sunnyvale, California 94086.

Specify the following for each part:

a. Model and serial number of instrument.

b. Fairchild Instrumentation part number.

c. Circuit reference designation, assembly number, or complete description.

To order a part not listed in table 5, provide a complete description of the part, including function and location.

ABBREVIATIONS

AB	Allen-Bradley Company
Amperex	Amperex Electric Corporation
Beckman	Beckman Instruments, Inc.
Belden	Belden Manufacturing Company
CTS	Chicago Telephone Supply
Continental-Wirt	Continental-Wirt Company
Elmenco	The Electro Motive Manufacturing Company
Erie	Erie Technological Products, Inc.
FI	Fairchild Instrumentation
FS	Fairchild Semiconductor
Fusetron	Bussmen Fuse Company
GE	General Electric Company
Griffith Plastics	Griffith Plastic Products Company
IRC	International Resistance Company
Nat'l Elect	National Electronics, Inc.
Mallory	P.R. Mallory and Company
RCL	RCL Electronics, Inc.
Sprague	Sprague Products Company
Tranex	Tranex, Inc.
TRW	TRW Capacitor Division
Wakefield	Wakefield Engineering, Inc.

Table 5. Model 7050 List of Replacement Parts

Circuit Ref.	Description	Manufacturer	Number
C1	Capacitor, fixed, 100 pF, 500 V	Amperex	03286450
C2	Capacitor, fixed, 0.1 μF ±10%, 100 V	Amperex	03285150
C3	Same as C1		
C4	Capacitor, fixed, 47 pF, 500 V	Amperex	03286430
C5	Capacitor, fixed, 0.01 μF ±10%, 200 V	TRW	03278910
C6	Capacitor, fixed, 56 μF, 6 V		03279560
C7	Same as C2		
C8	Capacitor, fixed, 820 pF, 300 V	Elmenco	03281560
C9	Capacitor, fixed, 1 μF, 35 V	Sprague	03282660
C10	Capacitor, fixed, 2.2 μF ±10%, 250 V	Amperex	03281280
C11	Capacitor, fixed, 330 pF, 500 V	Elmenco	03281450
C12	Capacitor, fixed, 0.047 μF ±10%, 100 V	Amperex	03285110
C13	Capacitor, fixed, 56 μF, 8 V		03287940
C14	Same as C9		
C15	Same as C1		
C16	Capacitor, fixed, 10 μF, 350 V	Mallory	03286660
C17	Capacitor, fixed, 100 μF, 64 V	Amperex	03286630
C18	Same as C2		
C19	Capacitor, fixed, 1000 μF, 10 V	Amperex	03286600
C20	Capacitor, fixed, 3300 pF ±10%, 100 V	Erie	03287650
C21	Capacitor, fixed, 1000 pF, 500 V	Amperex	03286510
C22	Same as C20		
C23	Same as C17		
C24	Same as C9		
C25	Capacitor, fixed, 51 pF, 500 V	Elmenco	03175210

Table 5 Model 7050 List of Replacement Parts (Continued)

Circuit Ref	Description	Manufacturer	Number
C26	Capacitor, fixed, 0.05 μF, 50 V	Sprague	03281790
C27	Same as C1		
C28	Capacitor, fixed, 750 pF, 300 V		03270170
C29	Same as C4		
CR1	Diode, S20944	FS	26004001
CR2	Diode, FD100	FS	26006930
CR3	Same as CR2		
CR4	Same as CR2		
CR5	Same as CR2		
CR6	Same as CR2		
CR7	Diode, 1N4005		26012270
CR8	Same as CR7		
CR9	Diode, 1N4003		26011080
CR10	Same as CR2		
CR11	Same as CR2		
CR12	Same as CR9		
CR13	Same as CR9		
CR14	Diode, S20943	FS	26003991
CR15	Same as CR9		
CR16	Diode, FD300		26012320
CR17	Same as CR16		
CR18	Same as CR2		
CR19	Same as CR2		
CR20	Same as CR16		

Table 5. Model 7050 List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
CR21	Same as CR2		
DS1	Lamp, neon, NE-2U	GE	12013110
DS2	Same as DS1		
DS3	Same as DS1		
F1	Fuse, 0.1 A, 250 V, SB (Models 7050 and 7050-100)	Fusetron	11007130
	Fuse, 1/16 A, 250 V, SB (Models 7050-220 and 7050-230)	Fusetron	11007400
J1	Jack, red, binding post		09064470
J2	Jack, white, binding post		09064490
J3	Jack, black, binding post		09064480
J4	Jack, black, banana		09056700
J5	Same as J4		
QA1	Integrated circuit, type CμL960	FS	26012430
QA2	Same as QA1		
QA3	Same as QA1		
QA4	Integrated circuit, type CμL959	FS	26012420
QA5	Same as QA4		
QA6	Same as QA4		
QA7	Integrated circuit, type CμL926	FS	26011940
QA8	Integrated circuit, type CμL958	FS	26012410
QA9	Same as QA8		
QA10	Same as QA8		
QA11	Same as QA7		
QA12	Integrated circuit, type CμL914	FS	26010980

Table 5. Model 7x5: List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
Q1	Transistor, 2N3565	FS	26012000
Q2	Same as Q1		
Q3	Transistor, 2N720A		26010850
Q4	Transistor, 2N4249	FS	26013260
Q5	Transistor, 2N4917	FS	26014620
Q6	Same as Q5		
Q7	Transistor, 2N2484		26010670
Q8	Same as Q7		
Q9	Transistor, 2N4250	FS	26014430
Q10	Same as Q7		
Q11	Same as Q1		
Q12	Same as Q1		
Q13	Transistor, 2N3564		26012620
Q14	Same as Q7		
Q15	Same as Q4		
Q16	Transistor, 2N4120	FS	26014410
Q17	Same as Q4		
Q18	Same as Q7		
Q19	Same as Q1		
Q20	Same as Q5		
Q21	Same as Q7		
Q22	Same as Q7		
Q23	Same as Q4		
Q24	Same as Q1		
Q25	Same as Q1		

Table 5. Model 7050 List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
Q26	Same as Q1		
Q27	Same as Q4		
Q28	Same as Q4		
Q29	Same as Q4		
Q30	Same as Q1		
Q31	Same as Q1		
Q32	Same as Q1		
Q33	Same as Q3		
Q34	Transistor, 2N3300		26013940
Q35	Same as Q1		
Q36	Same as Q4		
Q37	Same as Q1		
Q38	Same as Q4		
Q39	Same as Q4		
Q40	Same as Q3		
Q41	Same as Q4		
Q42	Same as Q7		
Q43	Same as Q5		
Q44	Same as Q13		
R1	Resistor, fixed, 100 kΩ ±5%, ½ W	Amperex	02393391
R2	Resistor, fixed, 1.5 MΩ ±5%, ¼ W	AB	02355370
R3	Resistor, fixed, 16 kΩ ±5%, ¼ W	Amperex	02040771
R4	Resistor, fixed, 330 kΩ ±5%, ¼ W	Amperex	02041081
R5	Resistor, variable, 2 kΩ ±10%, 2 W	Beckman	01111090

Table 5. Model 7050 List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
R6	Resistor, fixed, 14.1 kΩ ±1%, 2 W	RCL	02402920
R7	Resistor, fixed, 27 kΩ ±5%, ¼ W	Amperex	02040821
R8	Resistor, fixed, 10 kΩ ±5%, ¼ W	Amperex	02040721
R9	Resistor, fixed, 100 kΩ ±5%, ¼ W	Amperex	02040961
R10	Resistor, fixed, 16 kΩ ±1%, 2 W	RCL	02402930
R11	Resistor, fixed, 22 kΩ ±5%, ¼ W	Amperex	02040801
R12	Resistor, fixed, 10 MΩ ±5%, ¼ W	AB	02355570
R13	Resistor, fixed, 470 kΩ ±5%, ¼ W	Amperex	02041121
R14	Same as R11		
R15	Same as R9		
R16	Resistor, fixed, 4.7 MΩ ±5%, ¼ W	AB	02355490
R17	Same as R4		
R18	Resistor, fixed, 33 kΩ ±5%, ¼ W	Amperex	02040841
R19	Same as R18		
R20	Resistor, fixed, 1 MΩ ±5%, ½ W	AB	02031200
R21	Resistor, fixed, 8.96 MΩ ±5%, 2 W	IRC	02402880
R22	Resistor, fixed, 820 kΩ ±5%, ¼ W	Amperex	02041181
R23	Resistor, fixed, 2 kΩ ±1%, ½ W	Amperex	02041191
R24	Resistor, fixed, 1 MΩ ±5%, ¼ W	Amperex	02041201
R25	Same as R9		
R26	Same as R8		
R27	Resistor, fixed, 47 kΩ ±5%, ¼ W	Amperex	02040881
R28	Resistor, variable, 20 kΩ ±10%, 1 W	Beckman	01111100
R29	Resistor, fixed 887 kΩ ±.5%, ¼ W	IRC	02402890
R30	Same as R16		

Table 5. Model 7050 List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
R31	Resistor, fixed, 56 Ω ±5%, ¼ W	Amperex	02040181
R32	Same as R2		
R33	Same as R9		
R34	Resistor, fixed, 220 kΩ ±5%, ¼ W	Amperex	02041041
R35	Same as R9		
R36	Same as R5		
R37	Resistor, fixed, 88.7 kΩ ±.5%, ¼ W	IRC	02402900
R38	Resistor, fixed, 2.2 MΩ ±5%, ¼ W	AB	02355410
R39	Same as R8		
R40	Resistor, fixed, 4.7 kΩ ±5%, ¼ W	Amperex	02040641
R41	Same as R27		
R42	Same as R8		
R43	Resistor, fixed, 1 kΩ ±5%, ¼ W	Amperex	02040481
R44	Resistor, fixed, 2.4 kΩ ±5%, ¼ W	Amperex	02040571
R45	Resistor, variable, 200 Ω ±10%, 1 W	Beckman	01111080
R46	Resistor, fixed, 9.86 kΩ ±.5%, 1 W	IRC	02402870
R47	Resistor, fixed, 10 kΩ ±1%, 2 W	RCL	02402910
R48	Resistor, fixed, 22 MΩ ±5%, ¼ W	AB	02355650
R49	Resistor, fixed, 120 kΩ ±5%, ¼ W	Amperex	02040981
R50	Resistor, fixed, 47 Ω ±5%, ¼ W	Amperex	02040161
R51	Same as R8		
R52	Same as R5		
R53	Same as R16		
R54	Resistor, fixed, 17.8 kΩ ±1%, 2 W	RCL	02402940
R55	Same as R45		

Table 5. Model 7050 List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
R56	Resistor, fixed, 910 kΩ ±1%, ¼ W	RCL	02402950
R57	Same as R27		
R58	Same as R8		
R59	Resistor, fixed, 7.5 MΩ ±5%, ¼ W	AB	02355540
R60	Resistor, fixed, 39 kΩ ±5%, ¼ W	Amperex	02040861
R61	Same as R60		
R62	Same as R60		
R63	Same as R60		
R64	Resistor, fixed, 390 kΩ ±5%, ¼ W	Amperex	02041101
R65	Same as R3		
R66	Same as R34		
R67	Same as R34		
R68	Resistor, fixed, 560 Ω ±5%, ¼ W	Amperex	02040421
R69	Resistor, fixed, 15 kΩ ±5%, ¼ W	Amperex	02040761
R70	Same as R43		
R71	Resistor, fixed, 3.9 kΩ ±5%, ¼ W	Amperex	02040621
R72	Same as R43		
R73	Resistor, fixed, 20 kΩ ±5%, ¼ W	Amperex	02040791
R74	Same as R7		
R75	Resistor, fixed, 3.6 kΩ ±5%, ¼ W	Amperex	02040611
R76	Resistor, fixed, 36 kΩ ±5%, ¼ W	Amperex	02040851
R77	Resistor, fixed, 3.3 kΩ ±5%, ¼ W	Amperex	02040601
R78	Resistor, fixed, 3 kΩ ±5%, ¼ W	Amperex	02040591
R79	Same as R69		
R80	Same as R8		

Table 5. Model 7050 List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
R81	Same as R40		
R82	Same as R18		
R83	Same as R27		
R84	Resistor, fixed, 12 kΩ ±5%, ¼ W	Amperex	02040741
R85	Same as R8		
R86	Same as R1		
R87	Same as R64		
R88	Resistor, fixed, 82 kΩ ±5%, ¼ W	Amperex	02040941
R89	Same as R88		
R90	Same as R13		
R91	Same as R13		
R92	Same as R40		
R93	Same as R3		
R94	Same as R44		
R95	Resistor, fixed, 6.2 kΩ ±5%, ¼ W	Amperex	02040671
R96	Resistor, fixed, 30 kΩ ±5%, ¼ W	Amperex	02040831
R97	Resistor, fixed, 220 kΩ ±5%, ¼ W	AB	02355170
R98	Same as R8		
R99	Same as R18		
R100	Same as R71		
R101	Same as R44		
R102	Resistor, fixed, 2.7 kΩ ±5%, ¼ W	Amperex	02040581
S1	Switch, rotary, PC lugs	CTS	05019071
S2	Switch, SPST	Continental-Wirt	05034990

Table 5. Model 7050 List of Replacement Parts (Continued)

Circuit Ref.	Description	Manufacturer	Number
T1	Transformer, power (Model 7050)	Tranex	20017002
	Transformer, power (Models 7050-100, 7050-220 and Model 7050-230)	Tranex	20017211
V1	Tube, readout NL848	Nat'l Elect.	25015510
V2	Same as V1		
V3	Same as V1		
XV1	Socket, tube	Nat'l Elect.	34011530
XV2	Same as XV1		
XV3	Same as XV1		
	Miscellaneous		
	Case	FI	33041041
	Cord, a-c power	Belden	50304520
	Foot, extrusion, rubber	FI	38020041
	Heatsink, transistor	Wakefield	27004360
	Knob, selector	Griffith Plastics	45011360
	Lens, light pipe	FI	48006701
	Lens, readout, red	FI	48006691
	Manual, Instruction	FI	67050971
	Pad, transistor		41012340
	Plug, handle, Mtg, hole	FI	64020471
	Shield, light	FI	42025861
	Kit, wire	FI	93000260
	Lens, readout, molding	FI	48006681

Table 6. Model 7050 List of Accessories

Accessory	FI Part Number
Current Shunt Kit, consisting of:	93000259
10 kΩ (150 μA full scale current)	09045091
1 kΩ (1.5 mA full scale current)	09045101
100 Ω (15 mA full scale current)	09045111
10 Ω (150 mA full scale current)	09045121
1 Ω (1.5 A full scale current)	09045131
Rack Mount	95000000
Tilt Stand/Handle Kit	93000258
Component parts for above:	
Base, support. Quantity 2	64020301
Leg, inner. Quantity 2	64020291
Leg, outer. Quantity 2	64020281
Bushing. Quantity 2	65002331
Retainer. Quantity 2	30060081
Washer, nylon. Quantity 8	62407210
Screw. Quantity 2	60112830
Lockwasher. Quantity 2	62300030

FIELD SALES OFFICES

Fairchild Instrumentation
4546 El Camino Real
Los Altos, California 94022
(415) 941-3111

Fairchild Instrumentation
2434 Dempster Street, Suite 6
Des Plaines, Illinois 60016
(312) 299-1048

Fairchild Instrumentation
50 Jericho Turnpike
Jericho, Long Island
New York 11753
(516) 333-9311

Fairchild Instrumentation Limited
Grove House
551 London Road
Isleworth, Middlesex
England
560-0838

Fairchild Instrumentation
5410 West Imperial Boulevard
Los Angeles, California 90045
(213) 678-3166

Fairchild Instrumentation
9360 Lanham Severn Road
Seabrook, Maryland 20801
(301) 459-4800

REPRESENTATIVE SALES OFFICES

ALABAMA
Reynolds & Associates, Inc.
904 Bob Wallace Avenue, Suite 122
Huntsville 35801

ARIZONA
Hyer Electronics
301 W. Indian School Rd., Suite 126
Phoenix
(602) 264-0291
TWX: 910-951-4210

COLORADO
Hyer Electronics
Denver Technological Center
7895 E. Prentice Avenue
Englewood 80110
(303) 771-5285
TWX: 910-935-0706

FLORIDA
Reynolds & Associates, Inc.
P. O. Box 1043
Eau Gallie 32925

Reynolds & Associates, Inc.
2903 Timberlake Road
Orlando 32806

GEORGIA
Reynolds & Associates, Inc.
484 Tara Trail NW
Atlanta 30324

ILLINOIS
Bard Associates, Inc.
La Grange Industrial Park
La Grange 60525

INDIANA
Bard Associates, Inc.
4002 Meadows Drive
Indianapolis 46205

IOWA
Engineering Services Company
1026 Third Avenue S.E.
Cedar Rapids 52403
(319) 366-1591

KANSAS
7924A States Line
Prarrie Village 66208
(913) Mi-9-4000

MICHIGAN
Twin Region Electronic Sales
2547 Monroe Boulevard
Dearborn 48124
(313) 274-4661

MINNESOTA
Bard Associates, Inc.
11200 Vincent Avenue, South
Minneapolis 55400

MISSOURI
Engineering Services Company
7546 Troost Avenue
Kansas City 64131
(816) 363-6000
TWX: 816-556-2347

Engineering Services Company
6717 Vernon Avenue
St. Louis 63130
(314) 726-2233
TELEX: 44 7311

NEW MEXICO
Hyer Electronics
210 La Veta, N.E.
Albuquerque 87108
(505) 265-5767
TWX: 910-989-1679

OHIO
Twin Region Electronic Sales, Inc.
21010 Center Ridge Road
Cleveland 44116
(216) 331-7650

PENNSYLVANIA
Twin Region Electronic Sales, Inc.
201 Penn Center Boulevard
Pittsburgh
(412) 824-1120

TEXAS
Airep Electronics, Inc.
P. O. Box 5555
Dallas 75214

INTERNATIONAL DISTRIBUTORS

AUSTRIA
E. Schrack Elektrizitats AG
Pottendorferstrasse 25-27
Vienna X11/87
Tel: 83.26.51

BELGIUM
Ets. de Greef
53 Avenue Everard
Brussels 19
Tel: 44.19.13
Cable: Matradio

DENMARK
Semler & Matthiassen
Aebelogade 1
(Box 879)
Copenhagen 0
Tel: (01) 29-03.11
TWX: 9311 Semmatt
Cable: Sematt Copenhagen

FINLAND
Havulinna Oy
P.O. Box 10468
Helsinki 10
Tel: (Puh) 61451
TWX: 12426 Havula Hki
Cable: Havula Helsinki

FRANCE
Etx. Radiophon
148, Avenue Malakoff
Paris 16e.
Tel: 553.32.50
TWX: 25849 Rdiofon Paris
Cable: Radiophon Paris

GERMANY
Nucletron vertriebs Gmbh,
60, Gartnerstrasse
8 Munich 54,
Tel: 54.60.81
TWX: 05-24208
Cable: Elektradimex

INDIA
Motwane Private, Ltd.
127, Mahatma Gandhi Road, Fort
(Post Box 1312)
Bombay IBR

ISRAEL
Elina Ltd.
P.O. Box 960
Tel-Aviv
Tel: 52068
Cable: Melindus Telaviv

ITALY
Dr. Ing. Mario Vianello
Via. L. Anelli 13
Milan
Tel: 553.081/811
Cable: Vianellomar Milano

NETHERLANDS
Groenpol Industrial Sales Co.
P. O. Box 1188
13-15 Prinsengracht
Amsterdam
Tel: 6.44.74
TWX: 1-11-77
Cable: Groenpol

NORWAY
Gustav A. Ring
Ringhuset, Volvat
Oslo 3
Tel: 46.68.90
TWX: 6234 Garing O
Cable: Garing Oslo

PORTUGAL
Electrotechnicos Reunidos Lda
Avenida Duque D'Avilla 66-3
Lisbon, 1
Tel: 41161/2/3/4/5
Cable: Electrotecnicos

SPAIN
Rema, Leo Haag
General Sanjurjo 18
Madrid, 3
Tel: 233.60.10

SWEDEN
J. C. Lagercrantz
Box 314
Solna, 3
Tel: 83.07.90
TWX: 10262 Fivessvee Sth
Cable: Fivessvee Sth

SWITZERLAND
Seyffer & Co. Inc.
Badenerstrasse 265
Zurich
Tel: (051) 25.54.11
Cable: Radioseyffer Zurich

TURKEY
Mevag
Galata Bankalar Caddesi 71-73
Istanbul
(P.O. Box 143)
Tel: 49.83.00
Cable: Vasfi Istanbul

UNITED KINGDOM
Aveley Electric Ltd.
South Ockendon, Essex
Tel: South Ockendon 3444
TWX: 24120 Avel Ockendon

INTERNATIONAL REPRESENTATIVE SALES OFFICES

CANADA
BRH Associates, Ltd.
6338 Victoria Avenue
Montreal 26, Quebec
(514) 733-5331

BRH Associates, Ltd.
1300 Carling Avenue, Suite 208
Ottawa, Ontario
(613) 728-0113

BRH Associates, Ltd.
12A Finch Avenue West, Suite 21
Willowdale, Ontario
(416) 223-4008

ABBREVIATED SPECIFICATIONS

MODEL 6200B CURVE TRACER

Extremely Versatile

Tests FET's, MOS-FET's, bipolars, unijunctions, and diodes.

Pulse Mode Operation

Low duty cycle operation permits device evaluation at higher current levels without destruction.

Wide Range Sweep Generator

1000 V for high voltage measurement; 5 amps for high current tests.

Extended Base Drive

Down to 100 nA for high gain devices; up to 35 V for FET's.

Indpendent Selection of First and Last Base Steps

One, two, three, or more curves may be selected for optimum display.

Display Inversion Capability

Orient display into any quadrant.

Detachable Test Fixture

Test fixture can be operated in remote location.

Compact - Light Weight - Rack Mountable

Solid State Silicon Reliability

Price - $1575

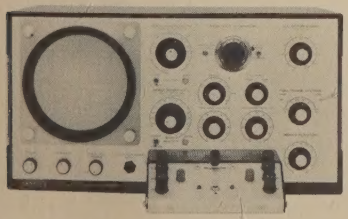

MODEL 7000 DIGITAL MULTIMETER

0.01% Accuracy
100 μV Resolution
Dual Slope Integration
Automatic Polarity
Display Storage
Greater than 1000 megohms Input Impedance
Floating Input — May be operated 500 volts above ground
Flashing Overload Indicator — 1200 volts on any range without damage
Integrated Circuits
No Fan
Optional AC—Ohms—Current—Auto Ranging—BCD Outputs

Price - $1150

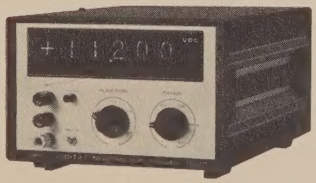

MODEL 7100A DIGITAL VOLTMETER

0.01% Accuracy
10 μV Resolution
Resistance Measurement
Voltage Ratio Measurement
Auto Ranging
Dual Slope Integration for Stability and Noise Rejection
Floated and Guarded Construction
20 Readings per Second
Integrated Circuits
Price - $2075

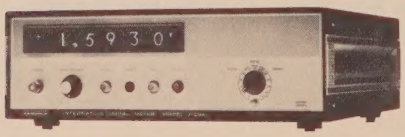

MODEL DM-03A AC/DC CONVERTER

0.05% Accuracy
30 Hz to 30 KHz Response
Floated and Guarded Construction
Price - $500

MODEL 8200 12.5 MHz UNIVERSAL COUNTER-TIMER

Frequency Measurement to 12.5 MHz
High accuracy single period measurement capability
Multiple period averaging
Frequency ratio
Time interval A-B or B-A
100 ns Resolution
Self test for all modes
Totalizing input: A or B
Scaled time base outputs
Integrated circuits
Display storage
Externally programmable
Price - $1395

FIRST CLASS
PERMIT NO. 329
Sunnyvale,
California

BUSINESS REPLY MAIL
No postage stamp necessary if mailed in the United States

Postage will be paid by

FAIRCHILD INSTRUMENTATION
974 East Arques Avenue
Sunnyvale, California 94086

FIRST CLASS
PERMIT NO. 329
Sunnyvale,
California

BUSINESS REPLY MAIL
No postage stamp necessary if mailed in the United States

Postage will be paid by

FAIRCHILD INSTRUMENTATION
974 East Arques Avenue
Sunnyvale, California 94086

FAIRCHILD
INSTRUMENTATION

www.manualsplus.com
1013097

Copyright 1967 by Fairchild Instrumentation, 974 East Arques Avenue, Sunnyvale, California, a division of Fairchild Camera and Instrument Corporation. Printed